



9ft & 10ft Wagon Kits

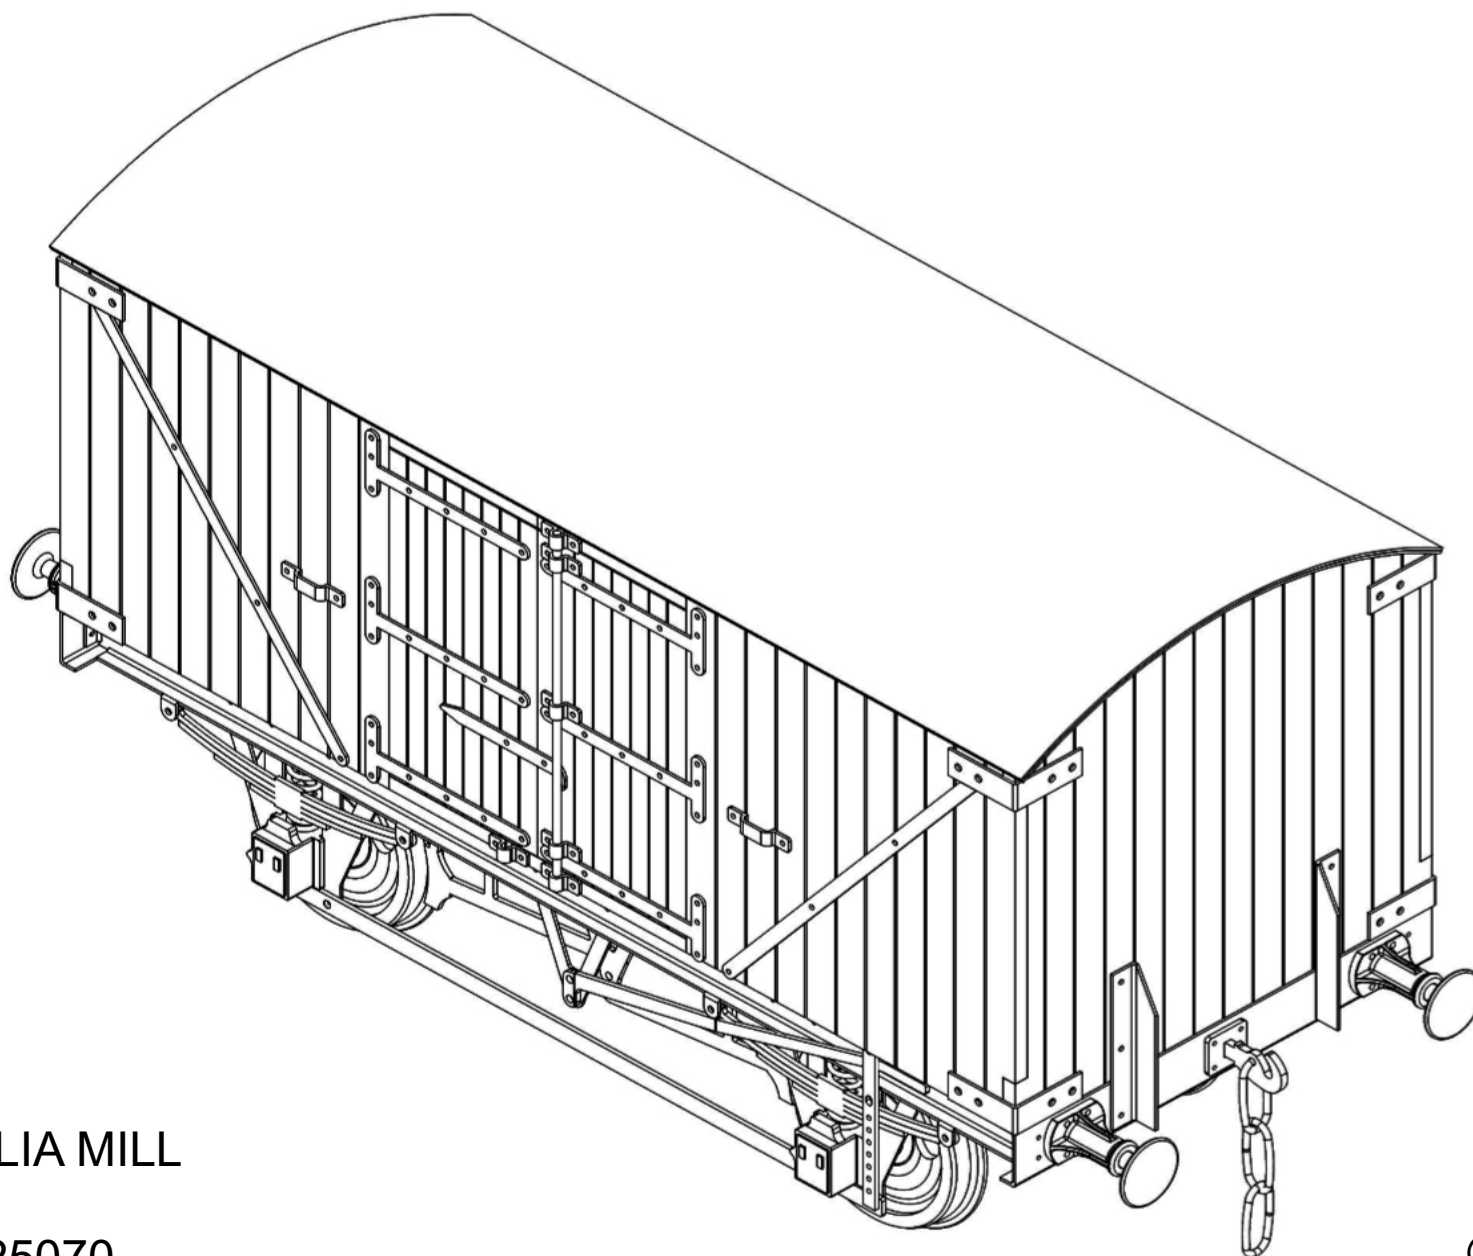


17D LTD
UNIT 13
VIA GELLIA MILL
DE4 2AJ
01629 825070


©17D LTD

Wagon Chassis

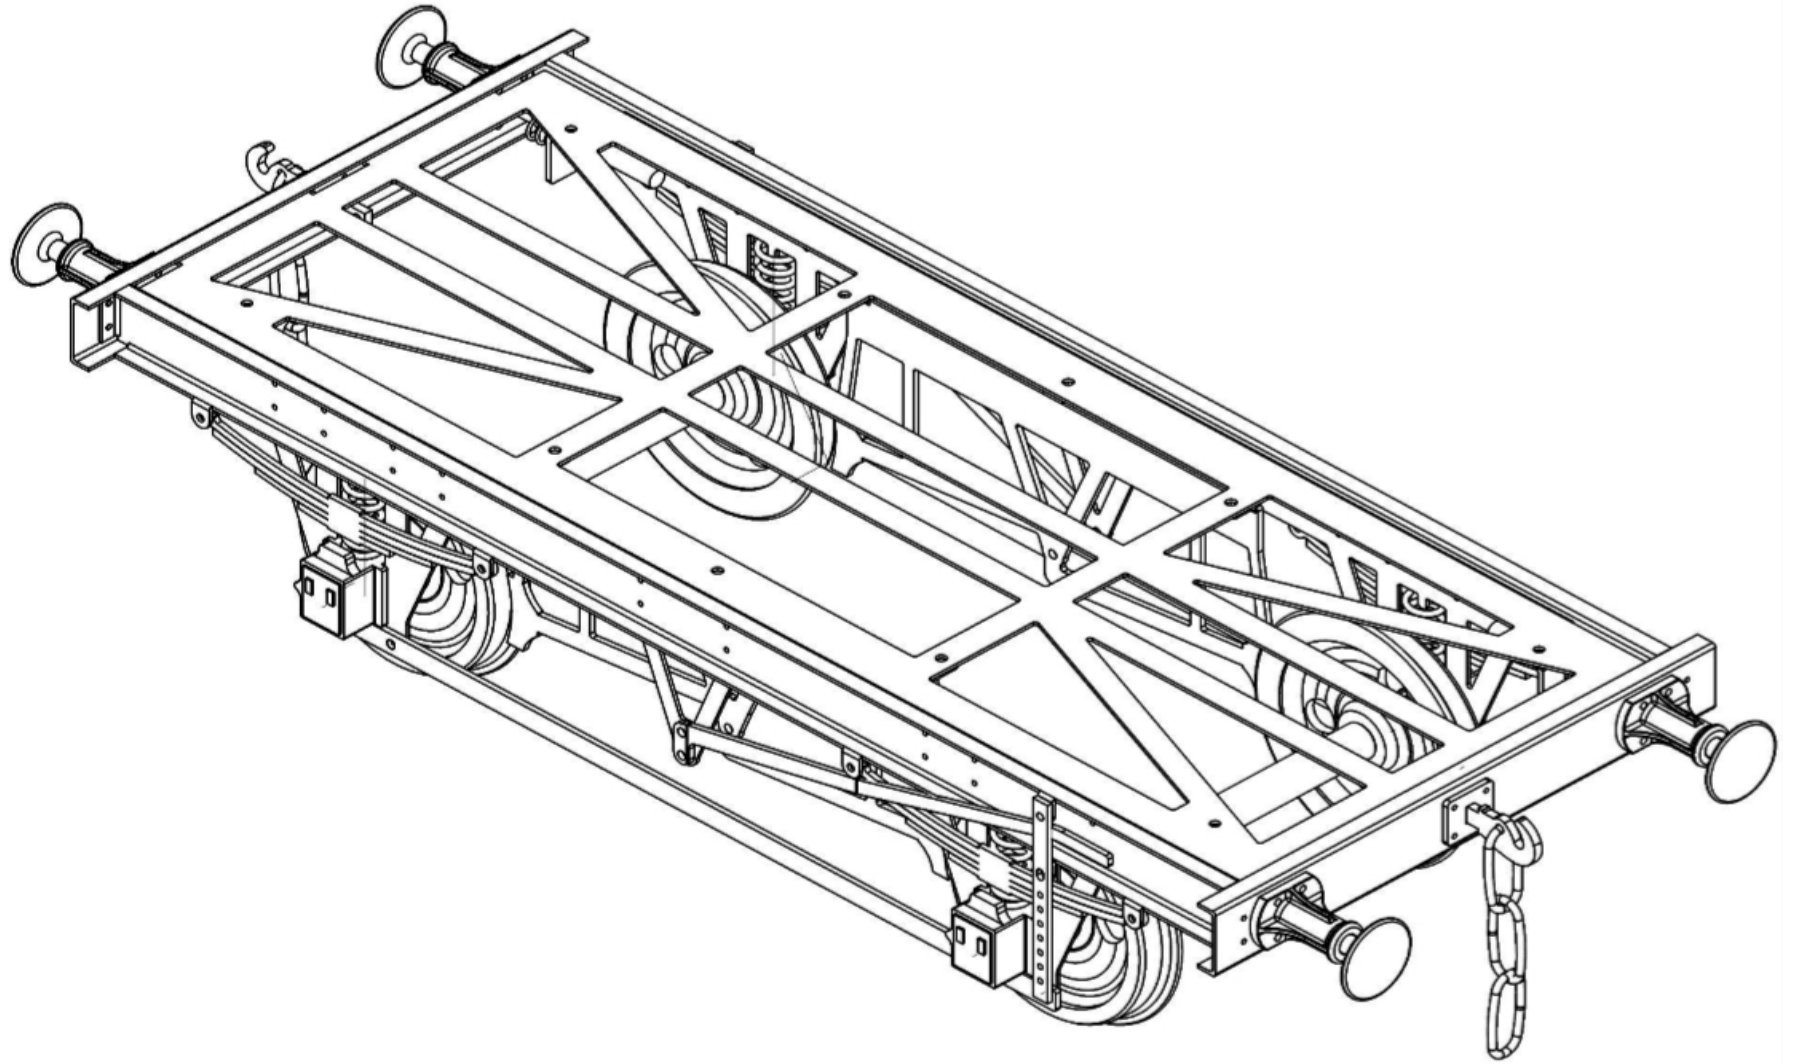


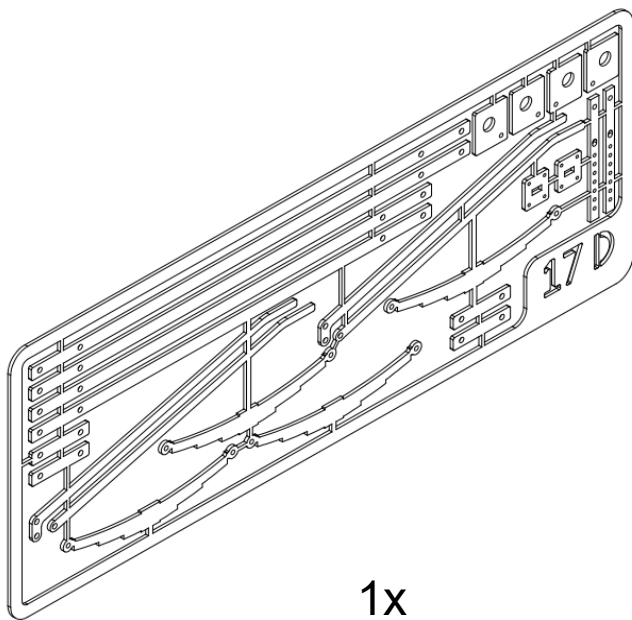

1x
9ft and 10ft Fret

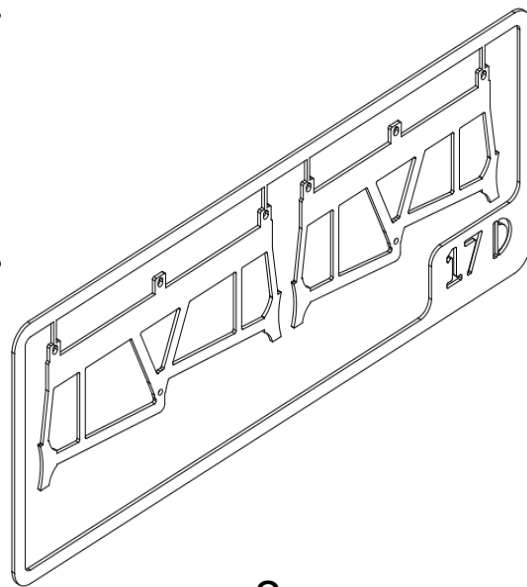


2x
Dummy Brake Fret

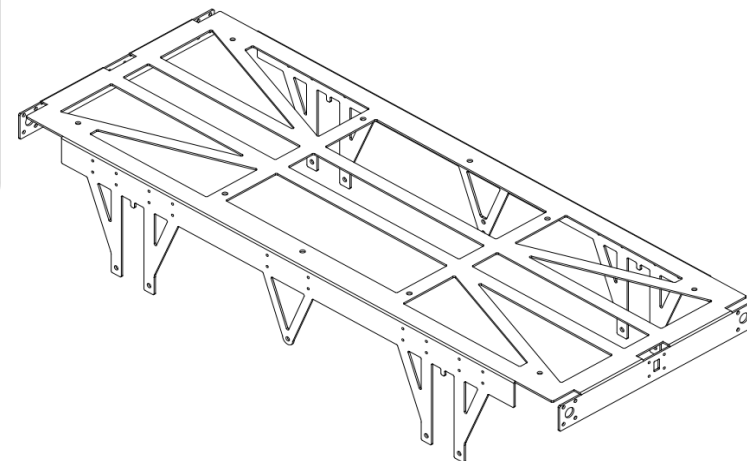


1x
Pre Folded Frame




2x
Buffer Beam

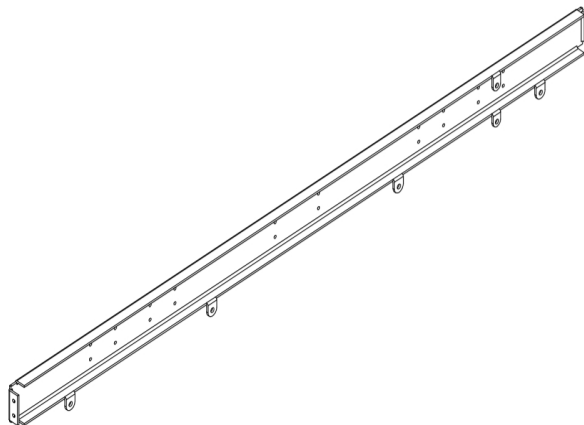


2x
Side Frames

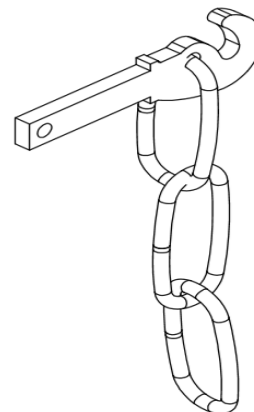


2x
Hook on Chain

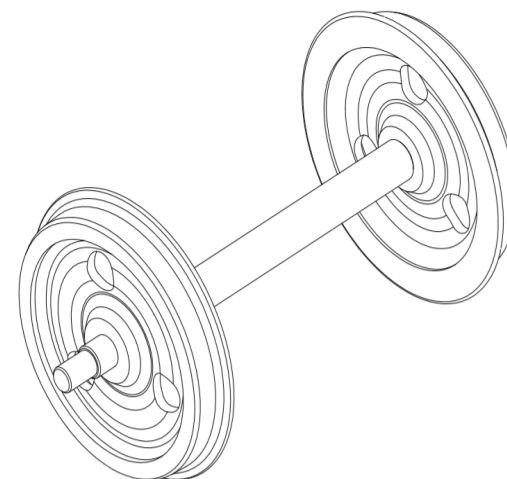


2x
Wheel on Axle

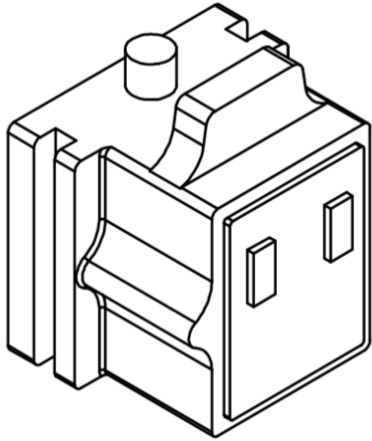


4x
Axle box

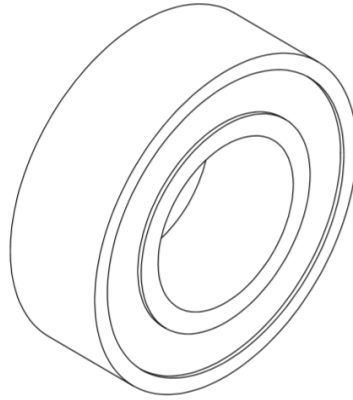


4x
Bearings

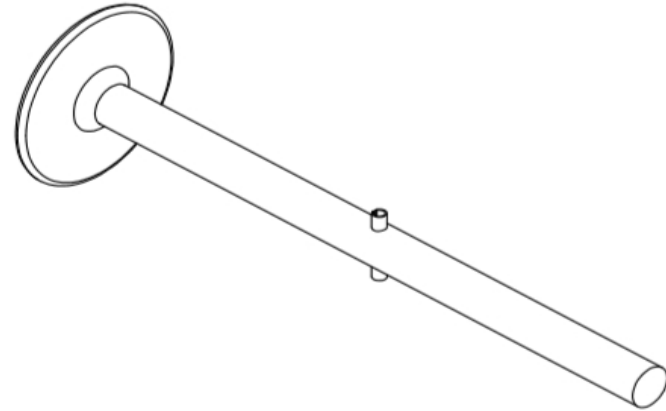


4x
RCH Buffer Heads + Pins

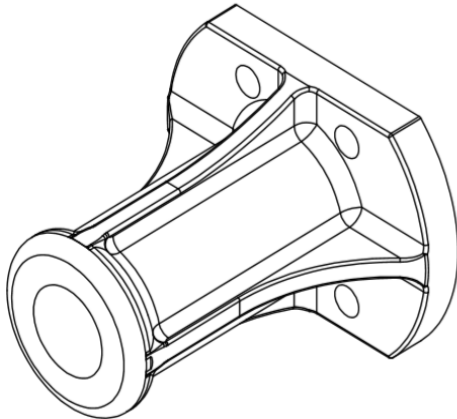

4x
RCH Buffer Stock

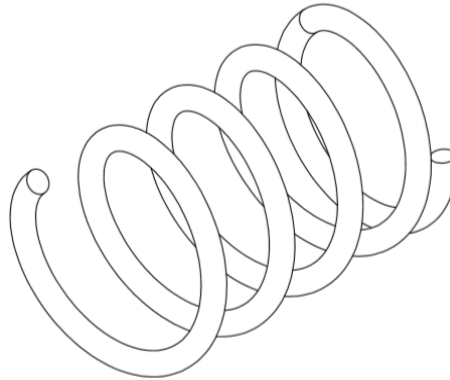


4x
RCH Buffer Springs

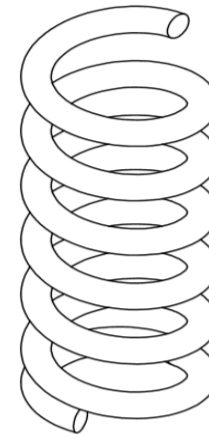


4x
Suspension Spring


Cut out required parts:


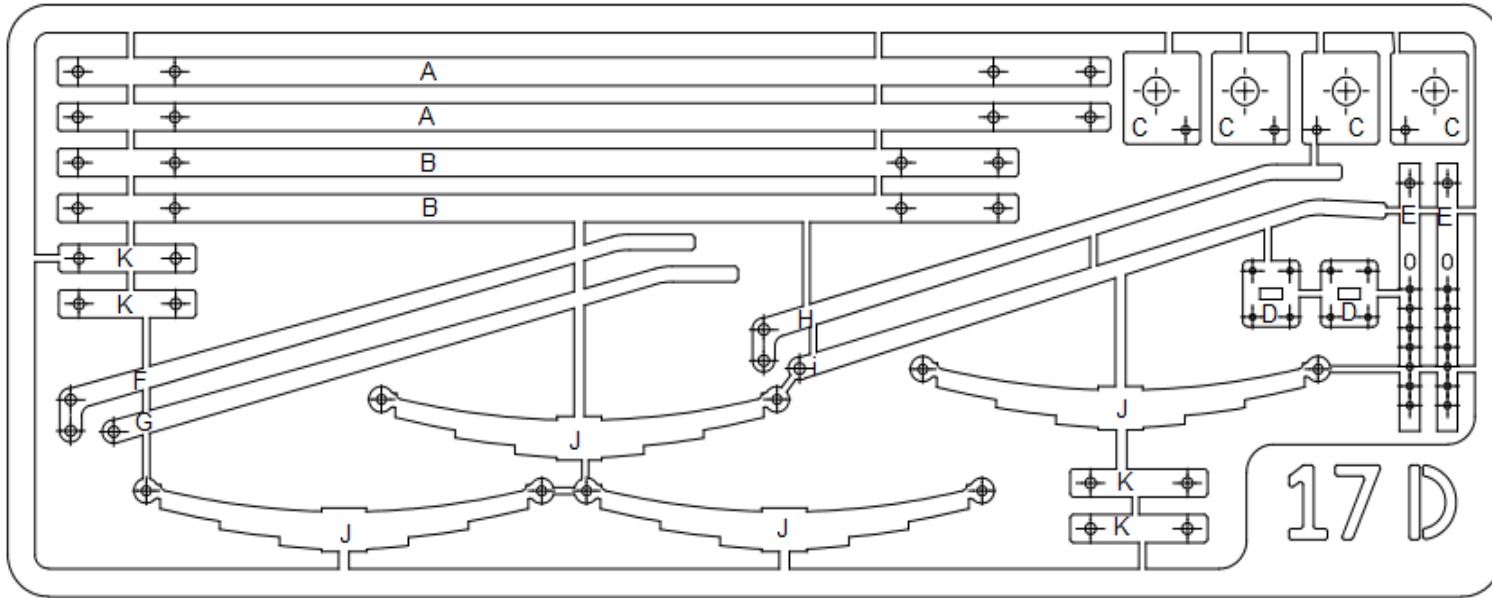


A = 10ft only
B = 9ft only
C = Required
D = Required
E = Required
F = 9ft only
G = 9ft only
H = 10ft only
I = 10ft only
J = Required
K = Choice

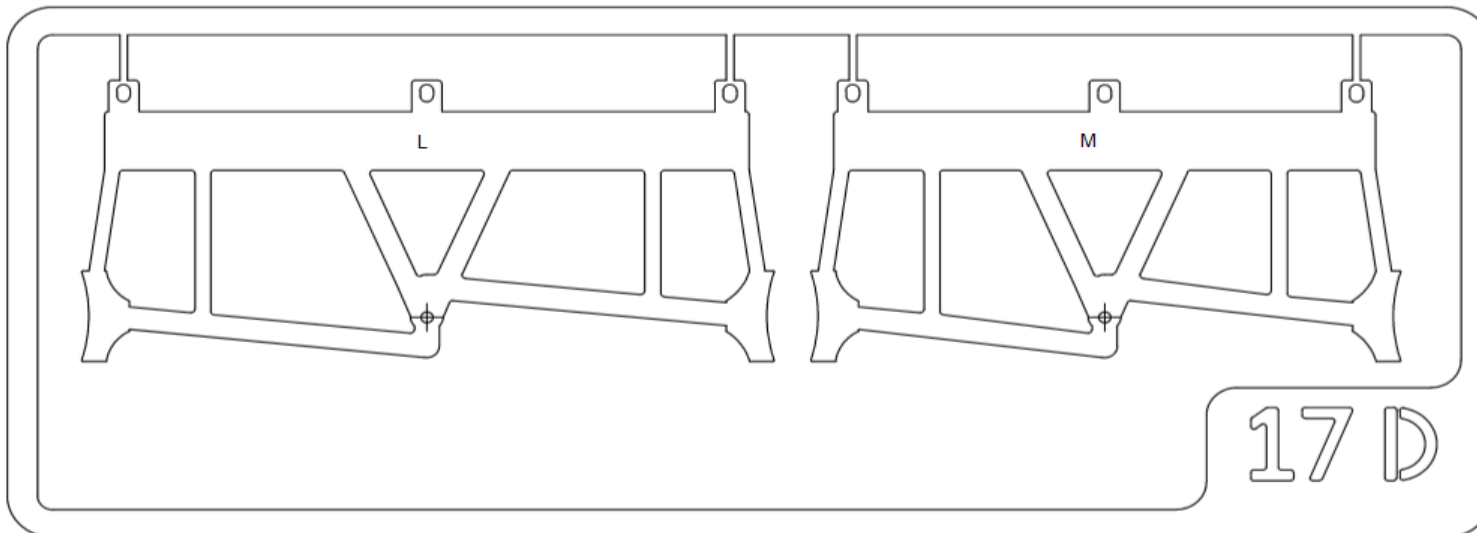


L = 10ft only
M = 9ft only

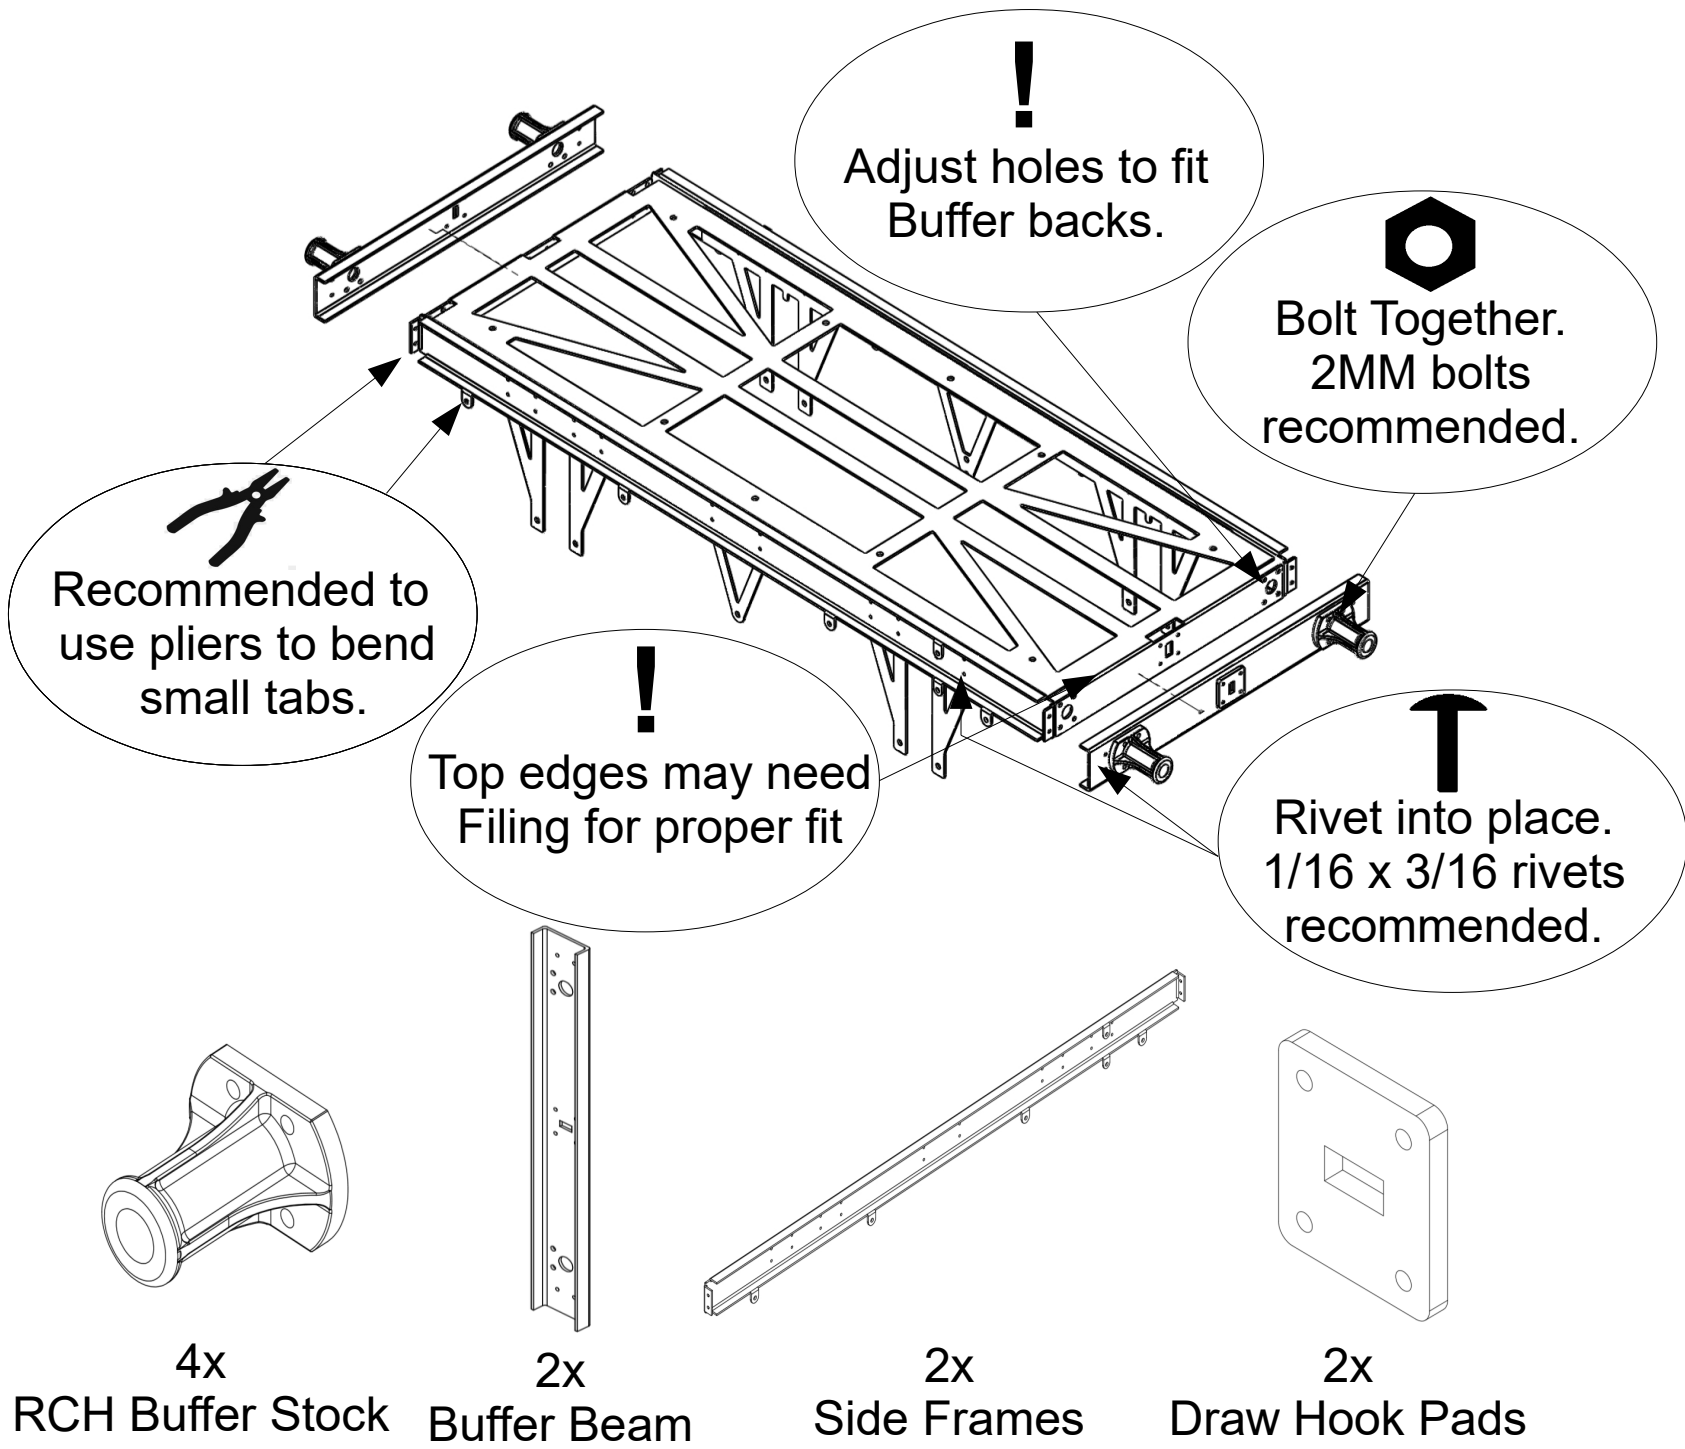


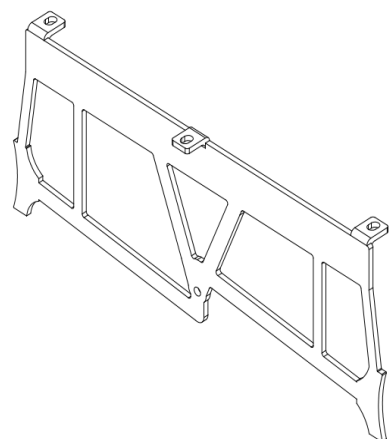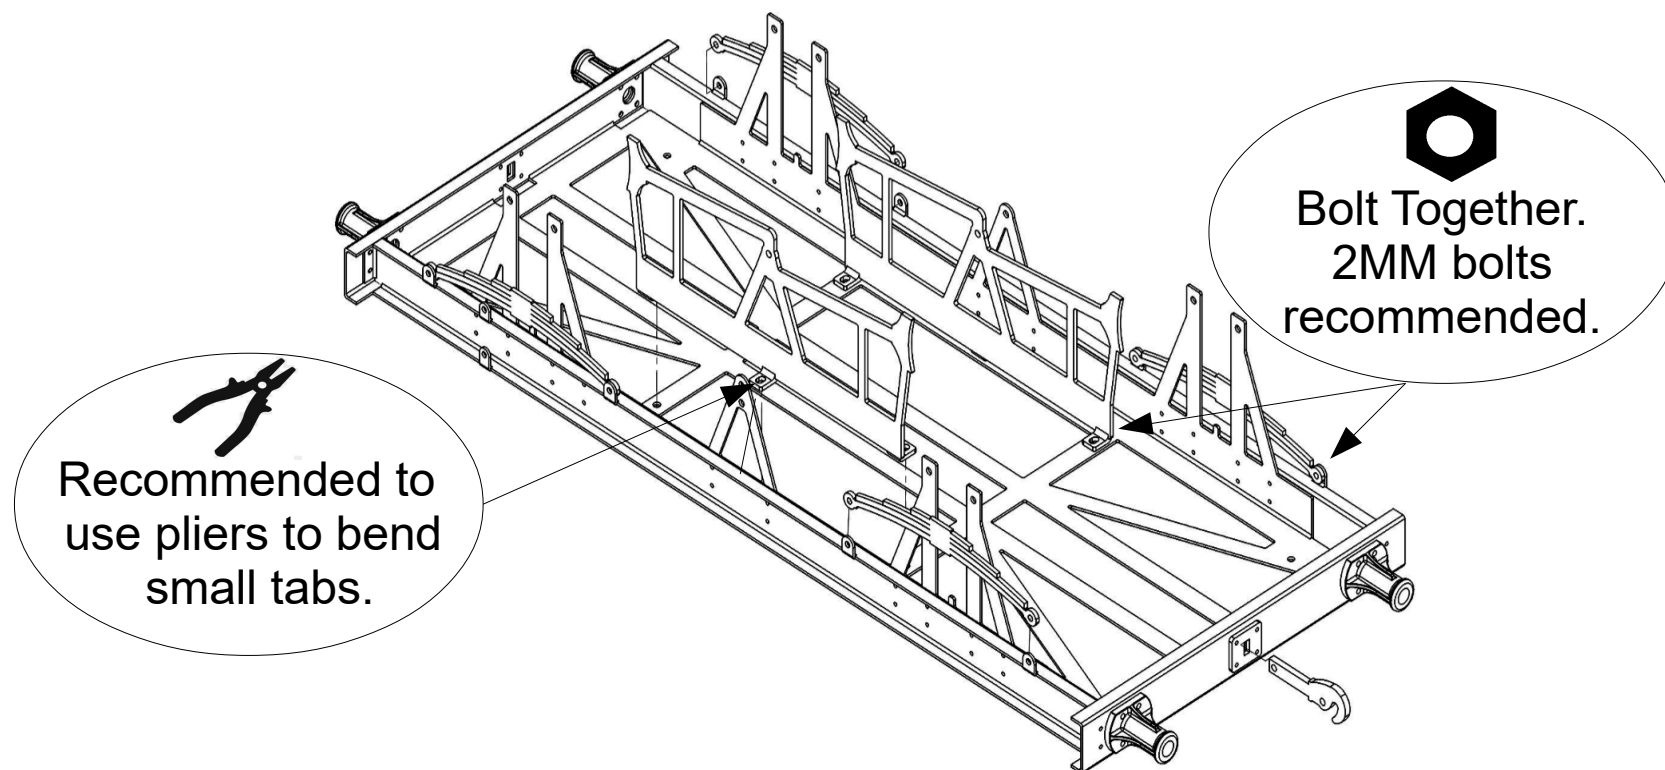



2x
Dummy Brake Fret

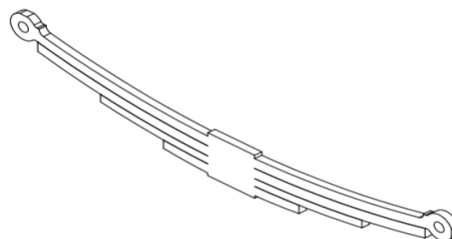


4x
Leaf Spring

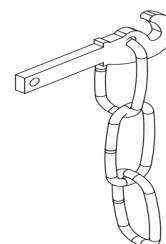


2x
Hook on Chain

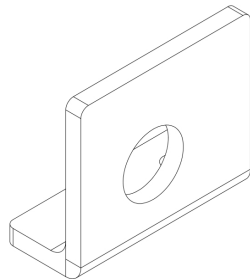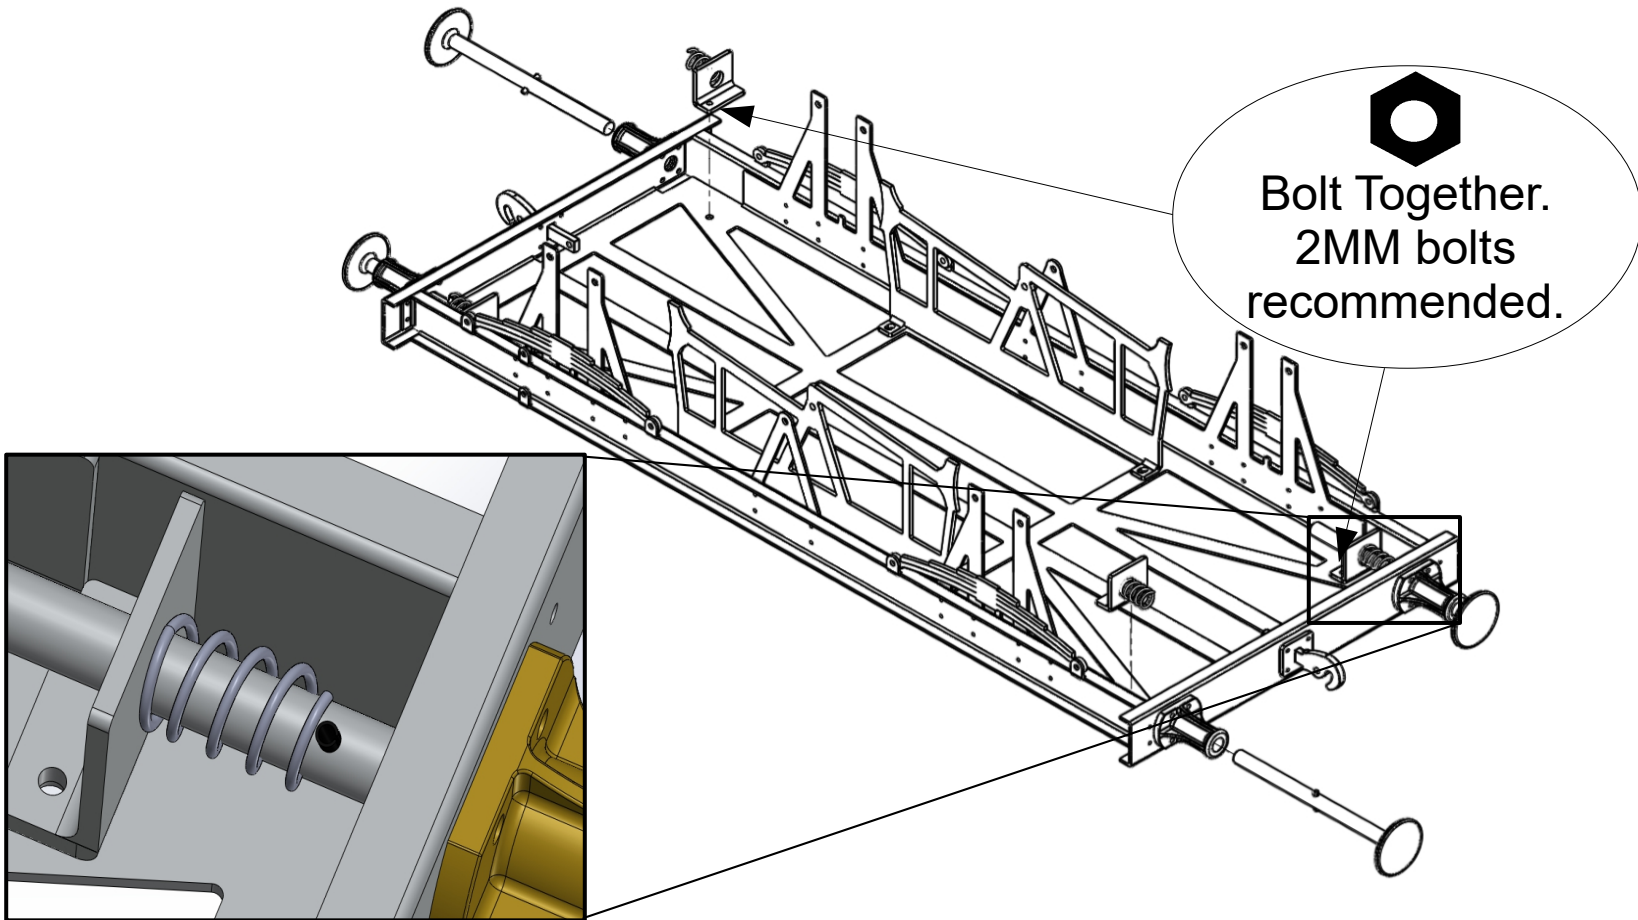


4x
Folded Buffer Keep

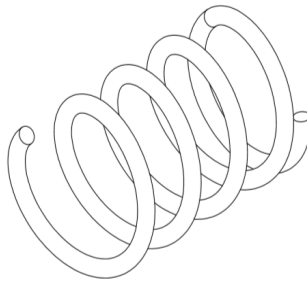



4x
RCH Buffer Springs

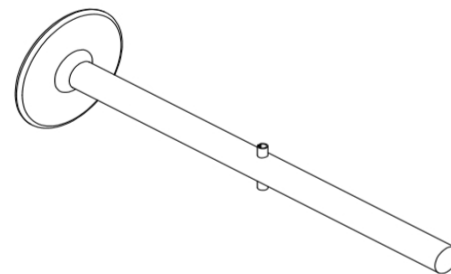


4x
RCH Buffer Heads + Pins

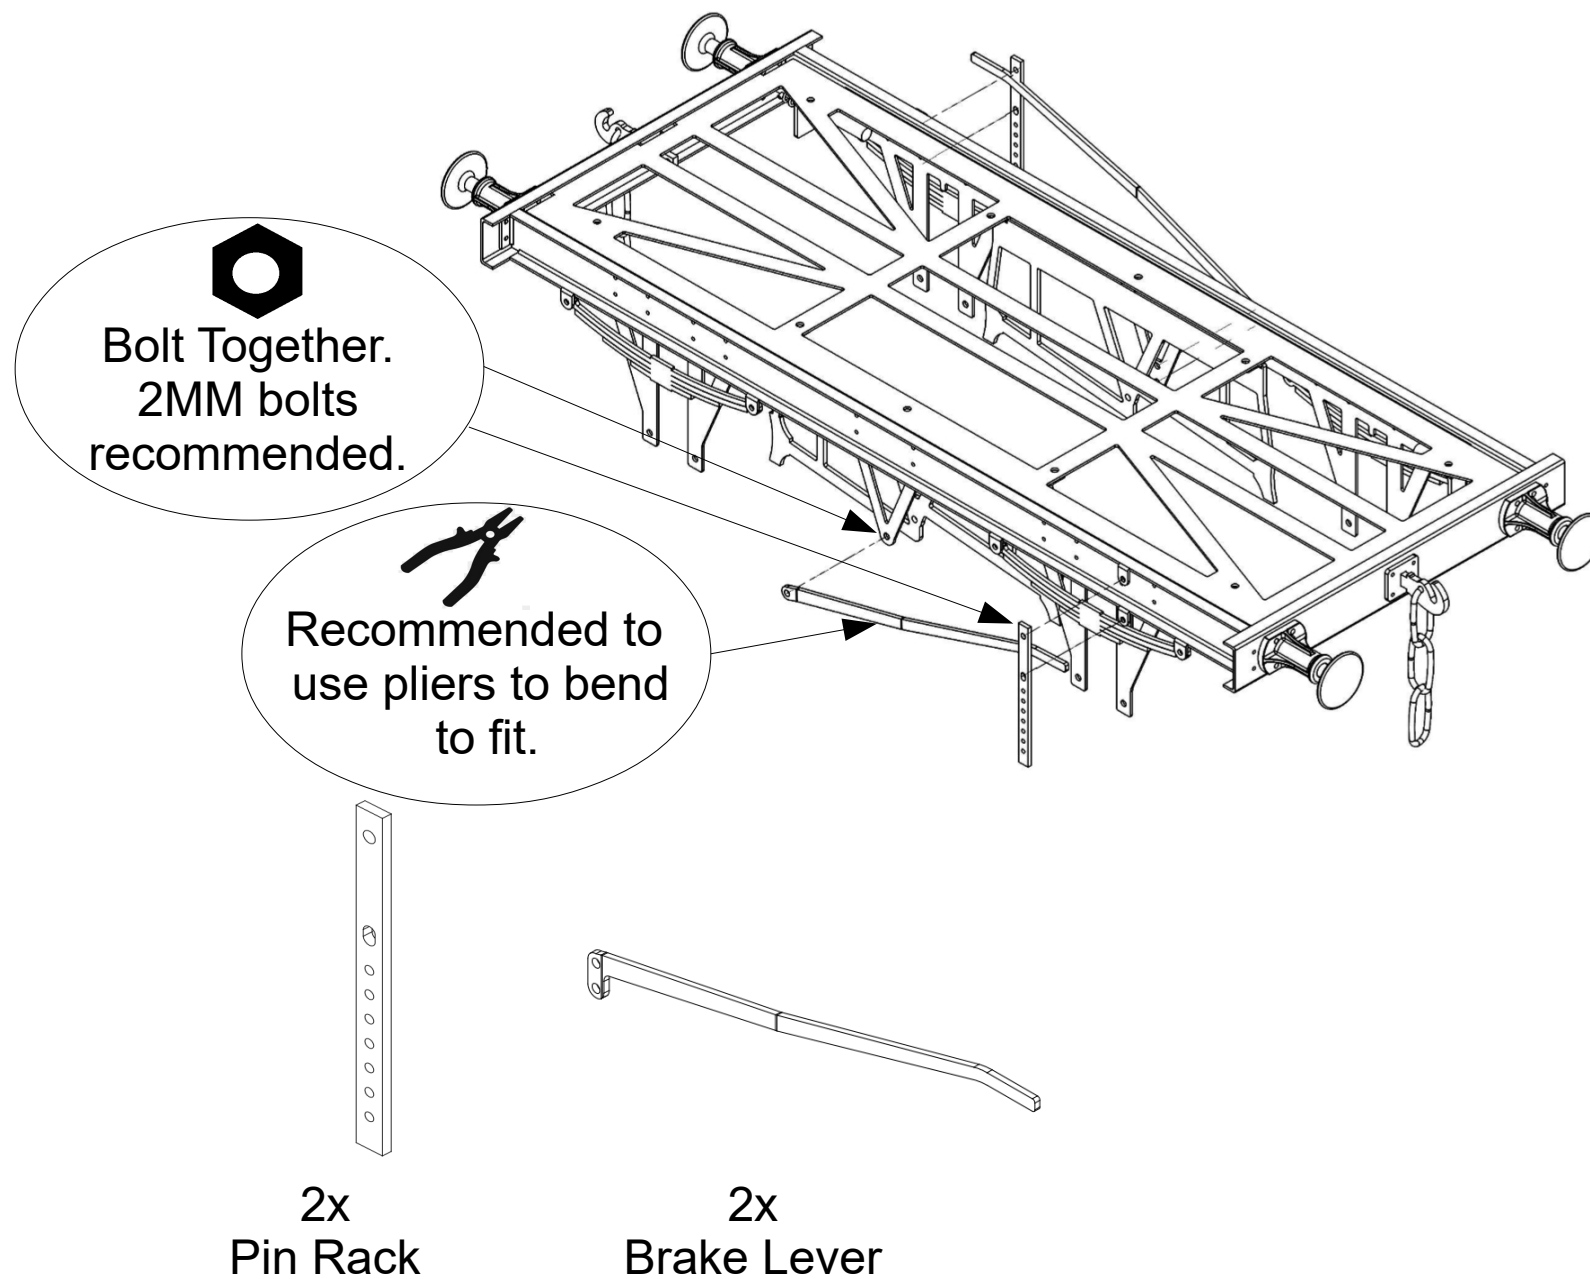

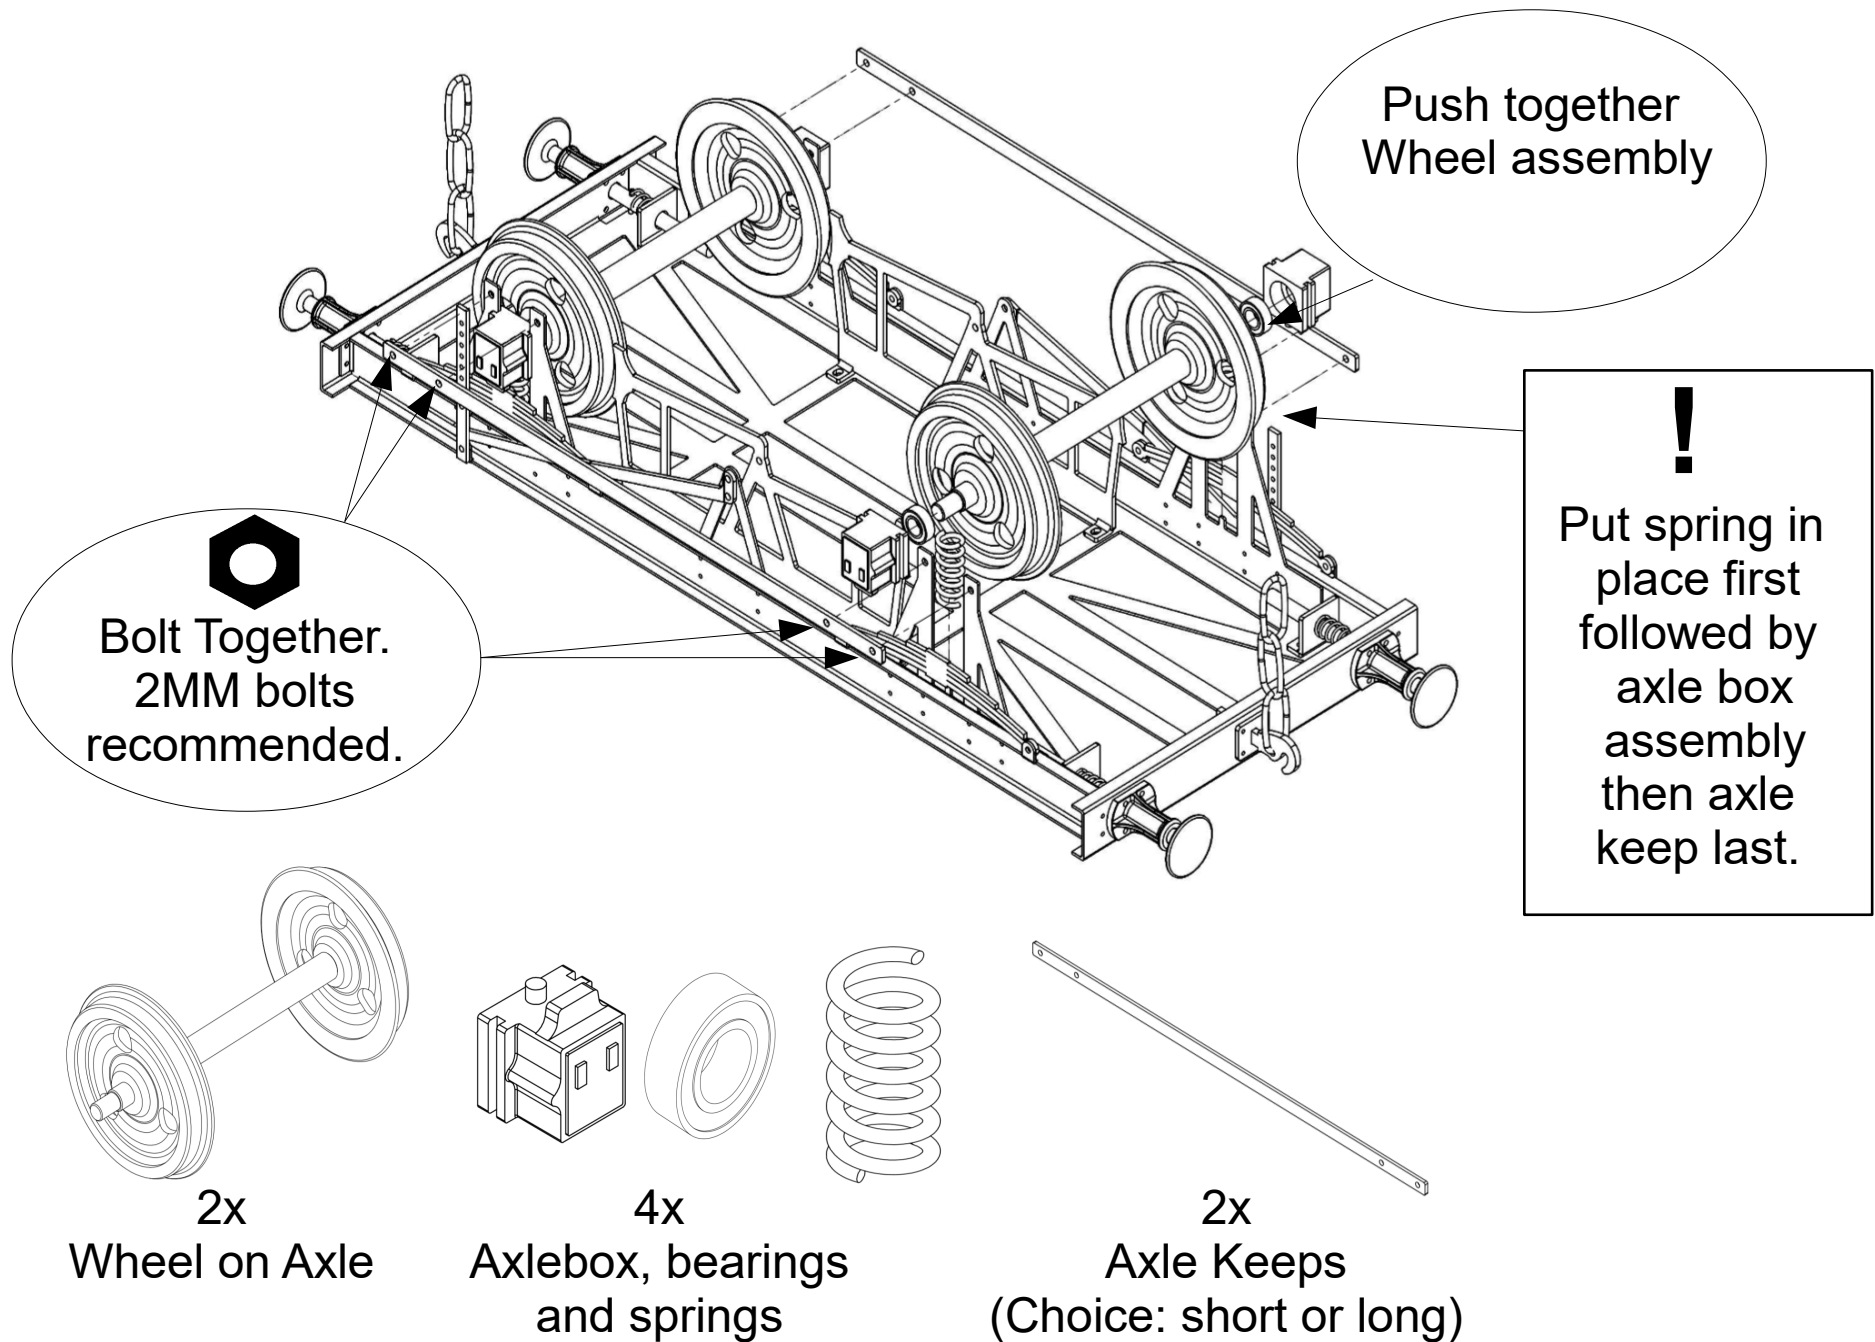

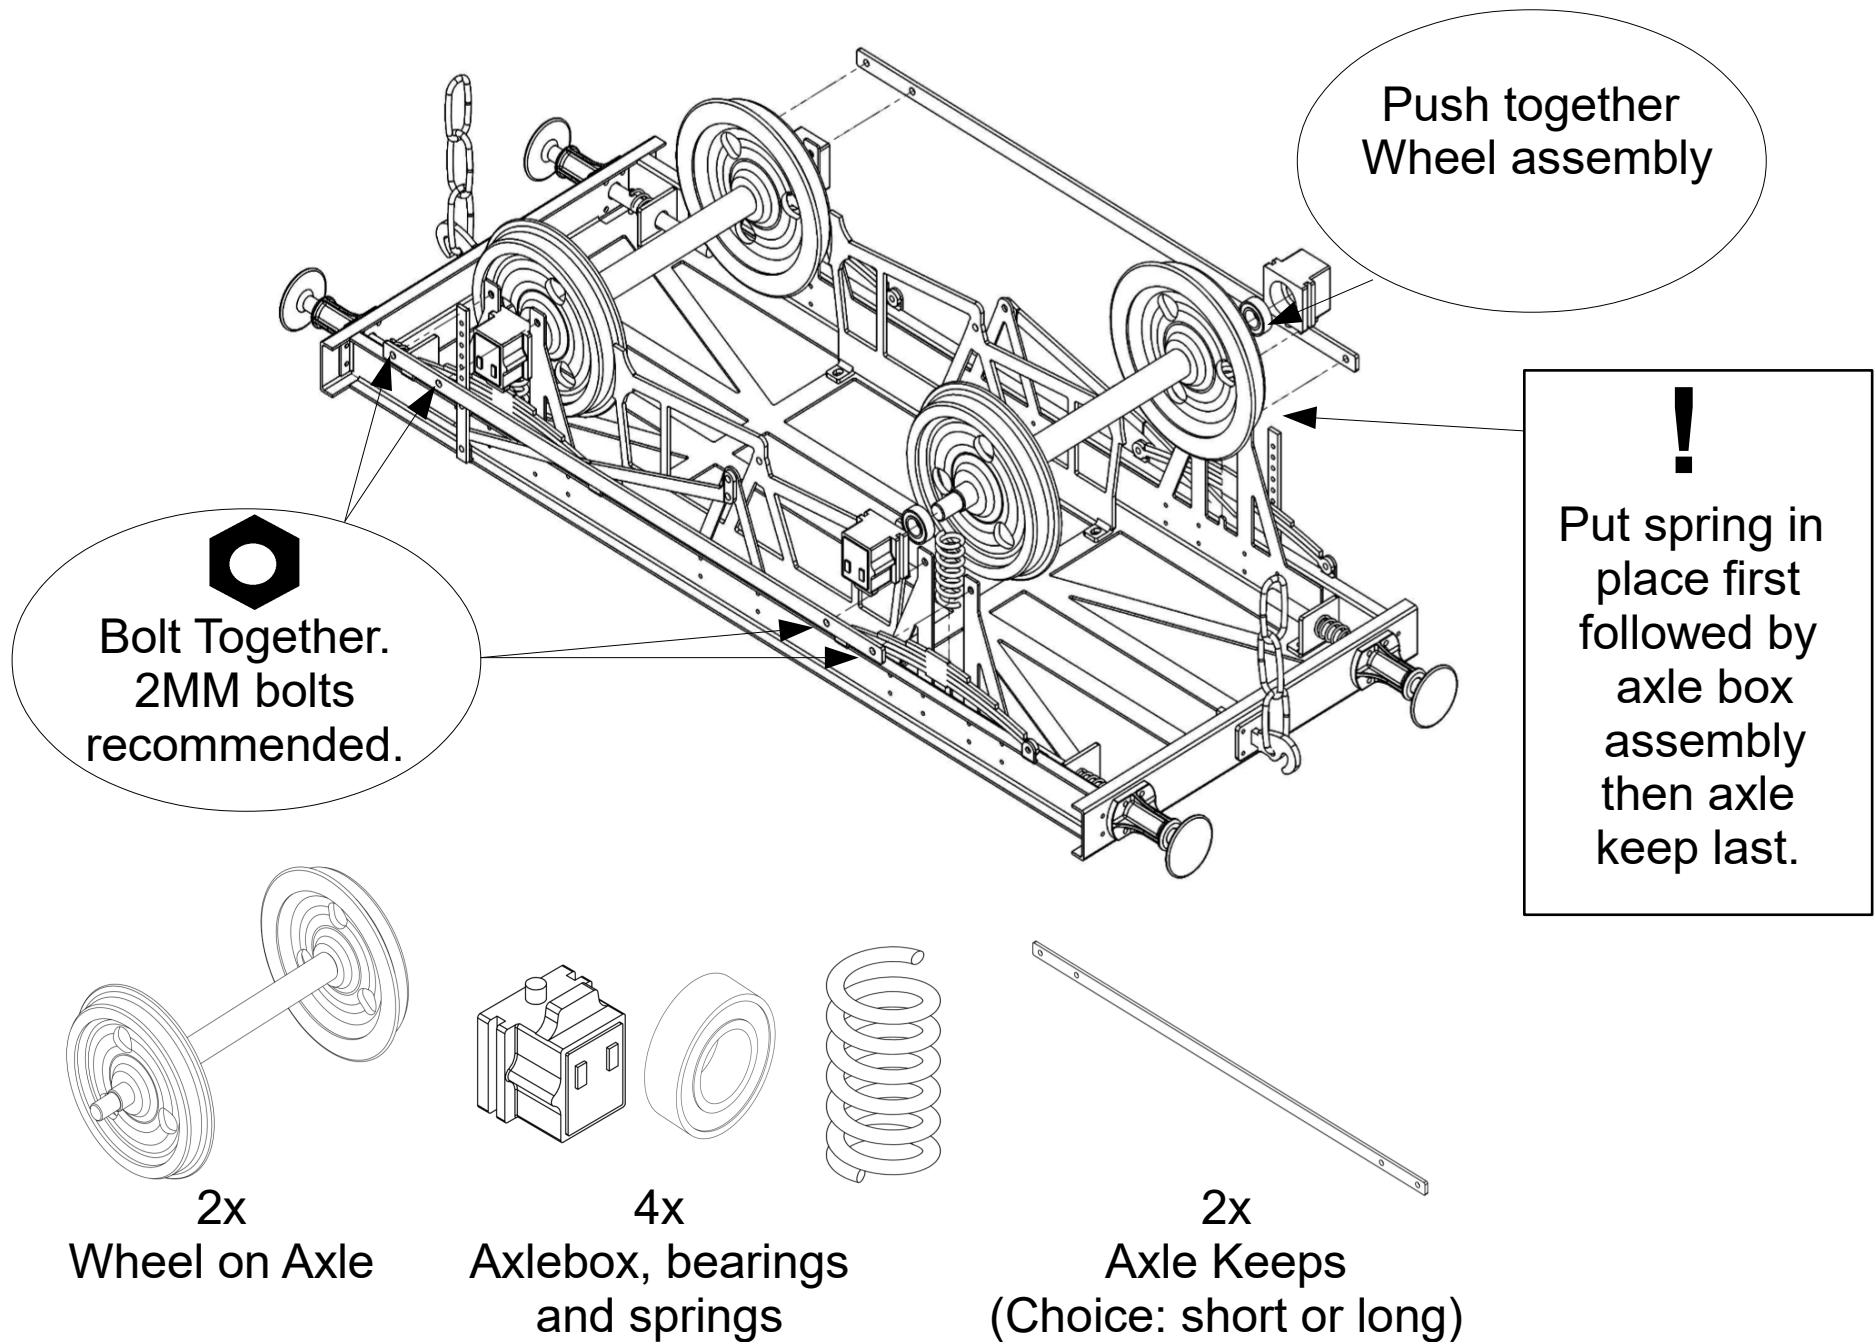


Planked Wagon Kit

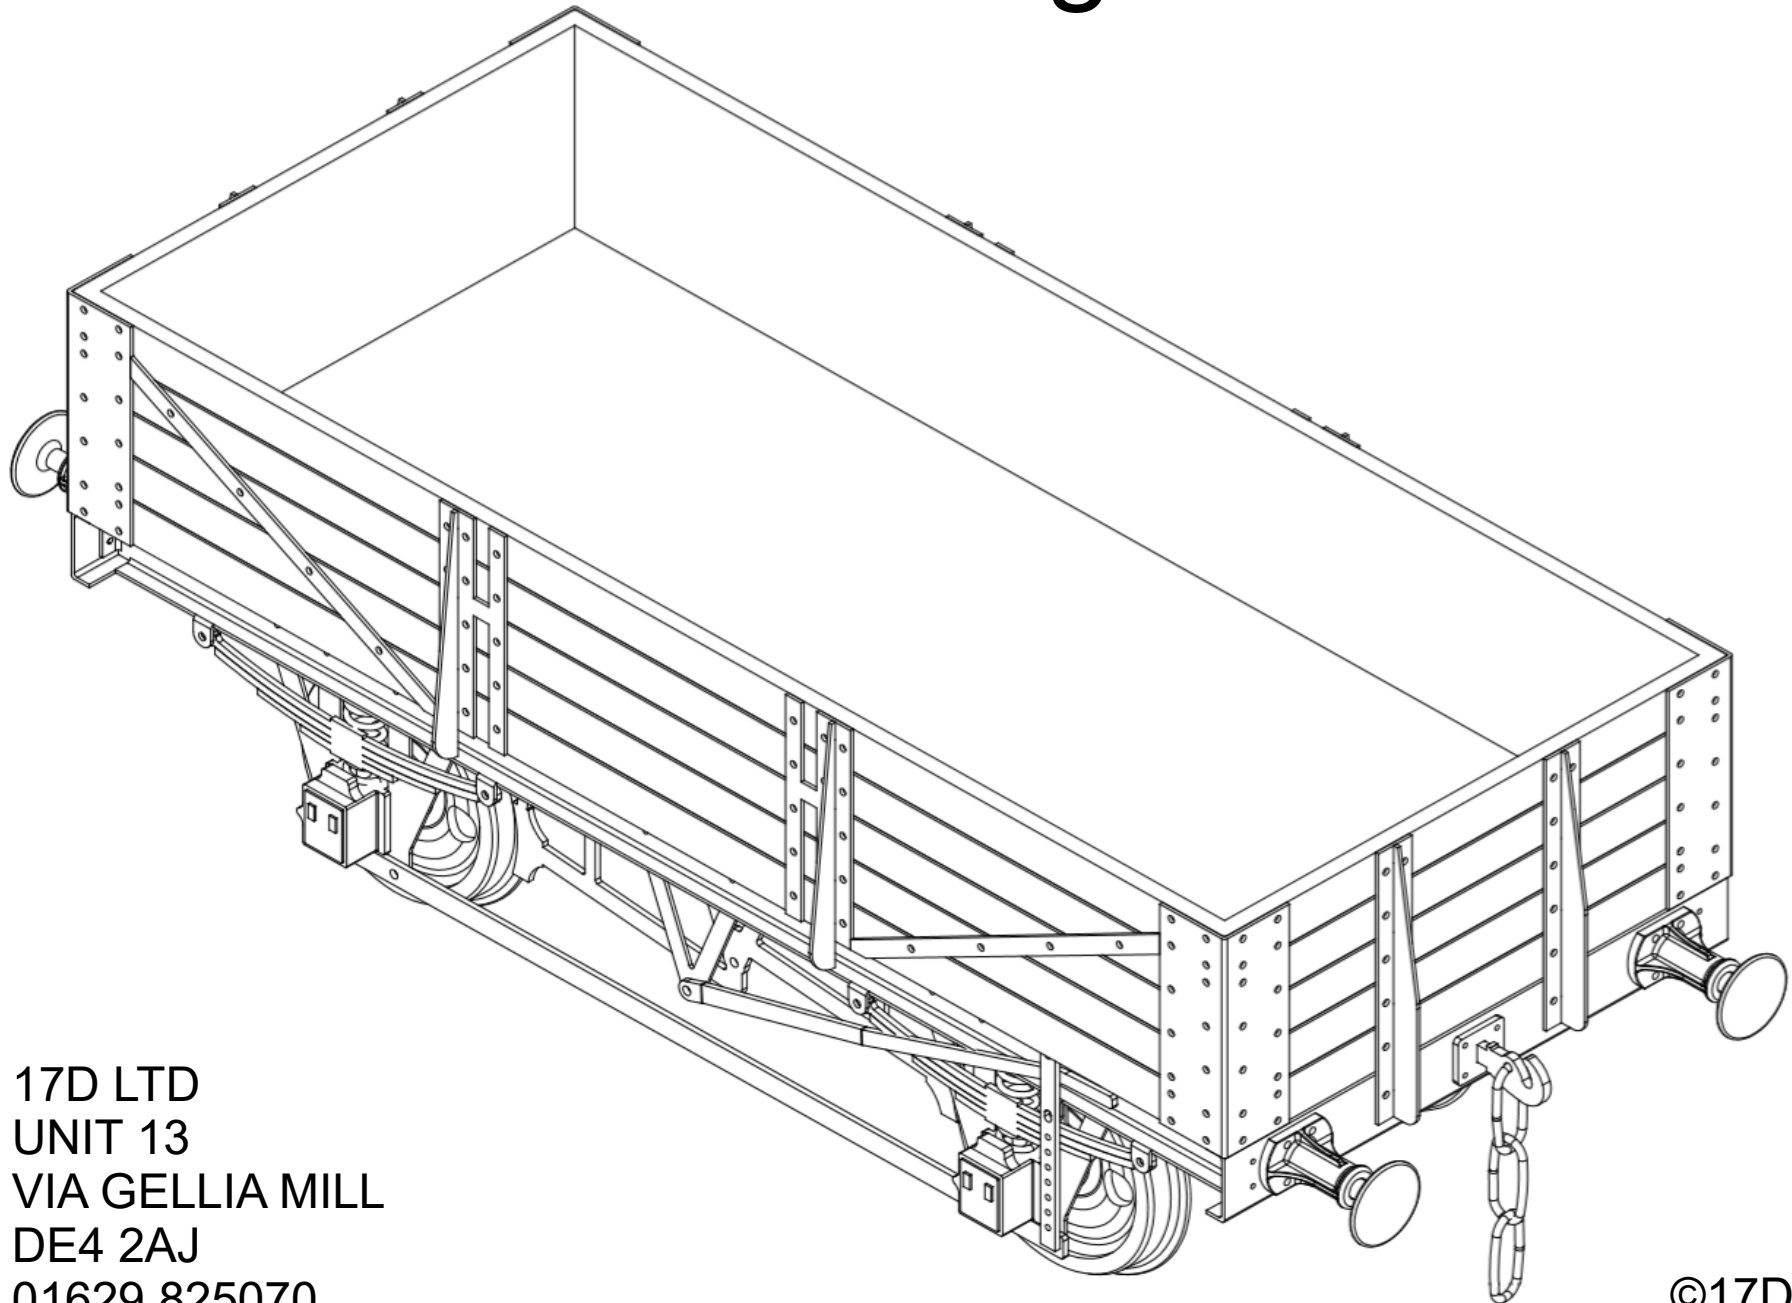


17D LTD
UNIT 13
VIA GELLIA MILL
DE4 2AJ
01629 825070

©17D LTD


Planked Versions:

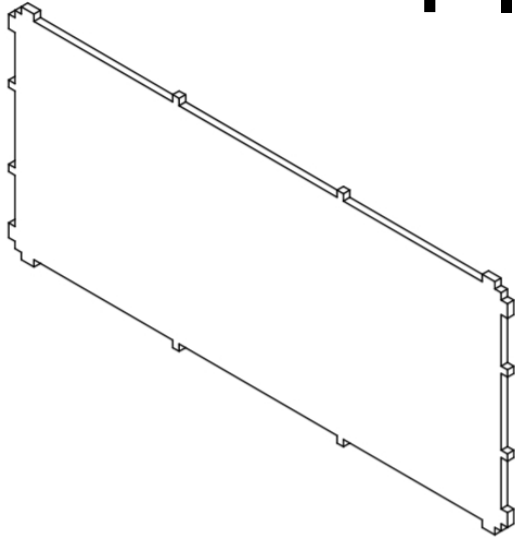


1x
Wooden Base

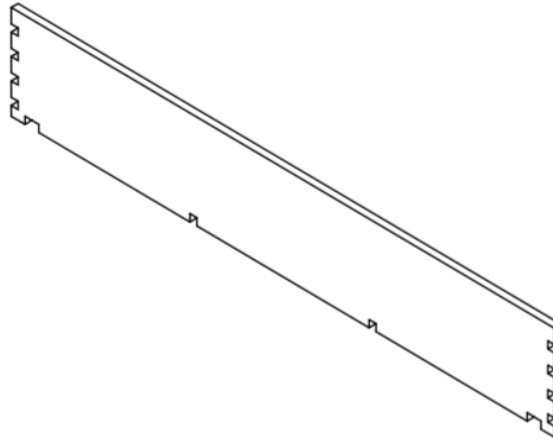


2x
Wooden Sides

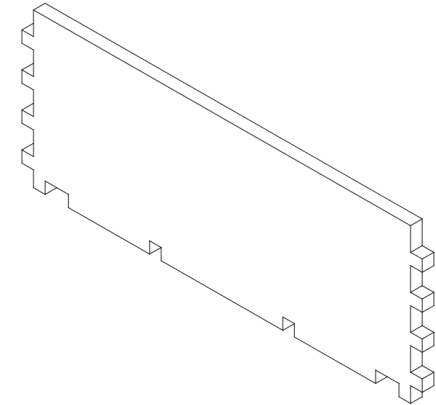


2x
Wooden Front and back

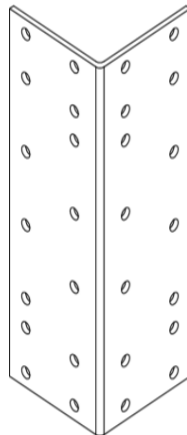



4x
Strapping Folded Corner:
5 Plank or 7 Plank

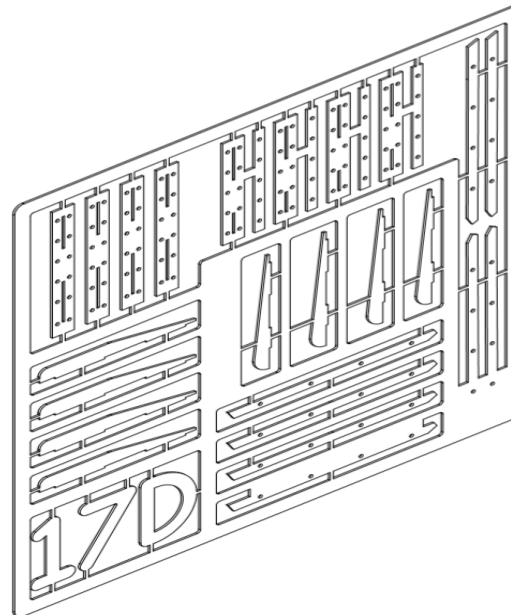

1x
Strapping Fret:
5 Plank or 7 Plank

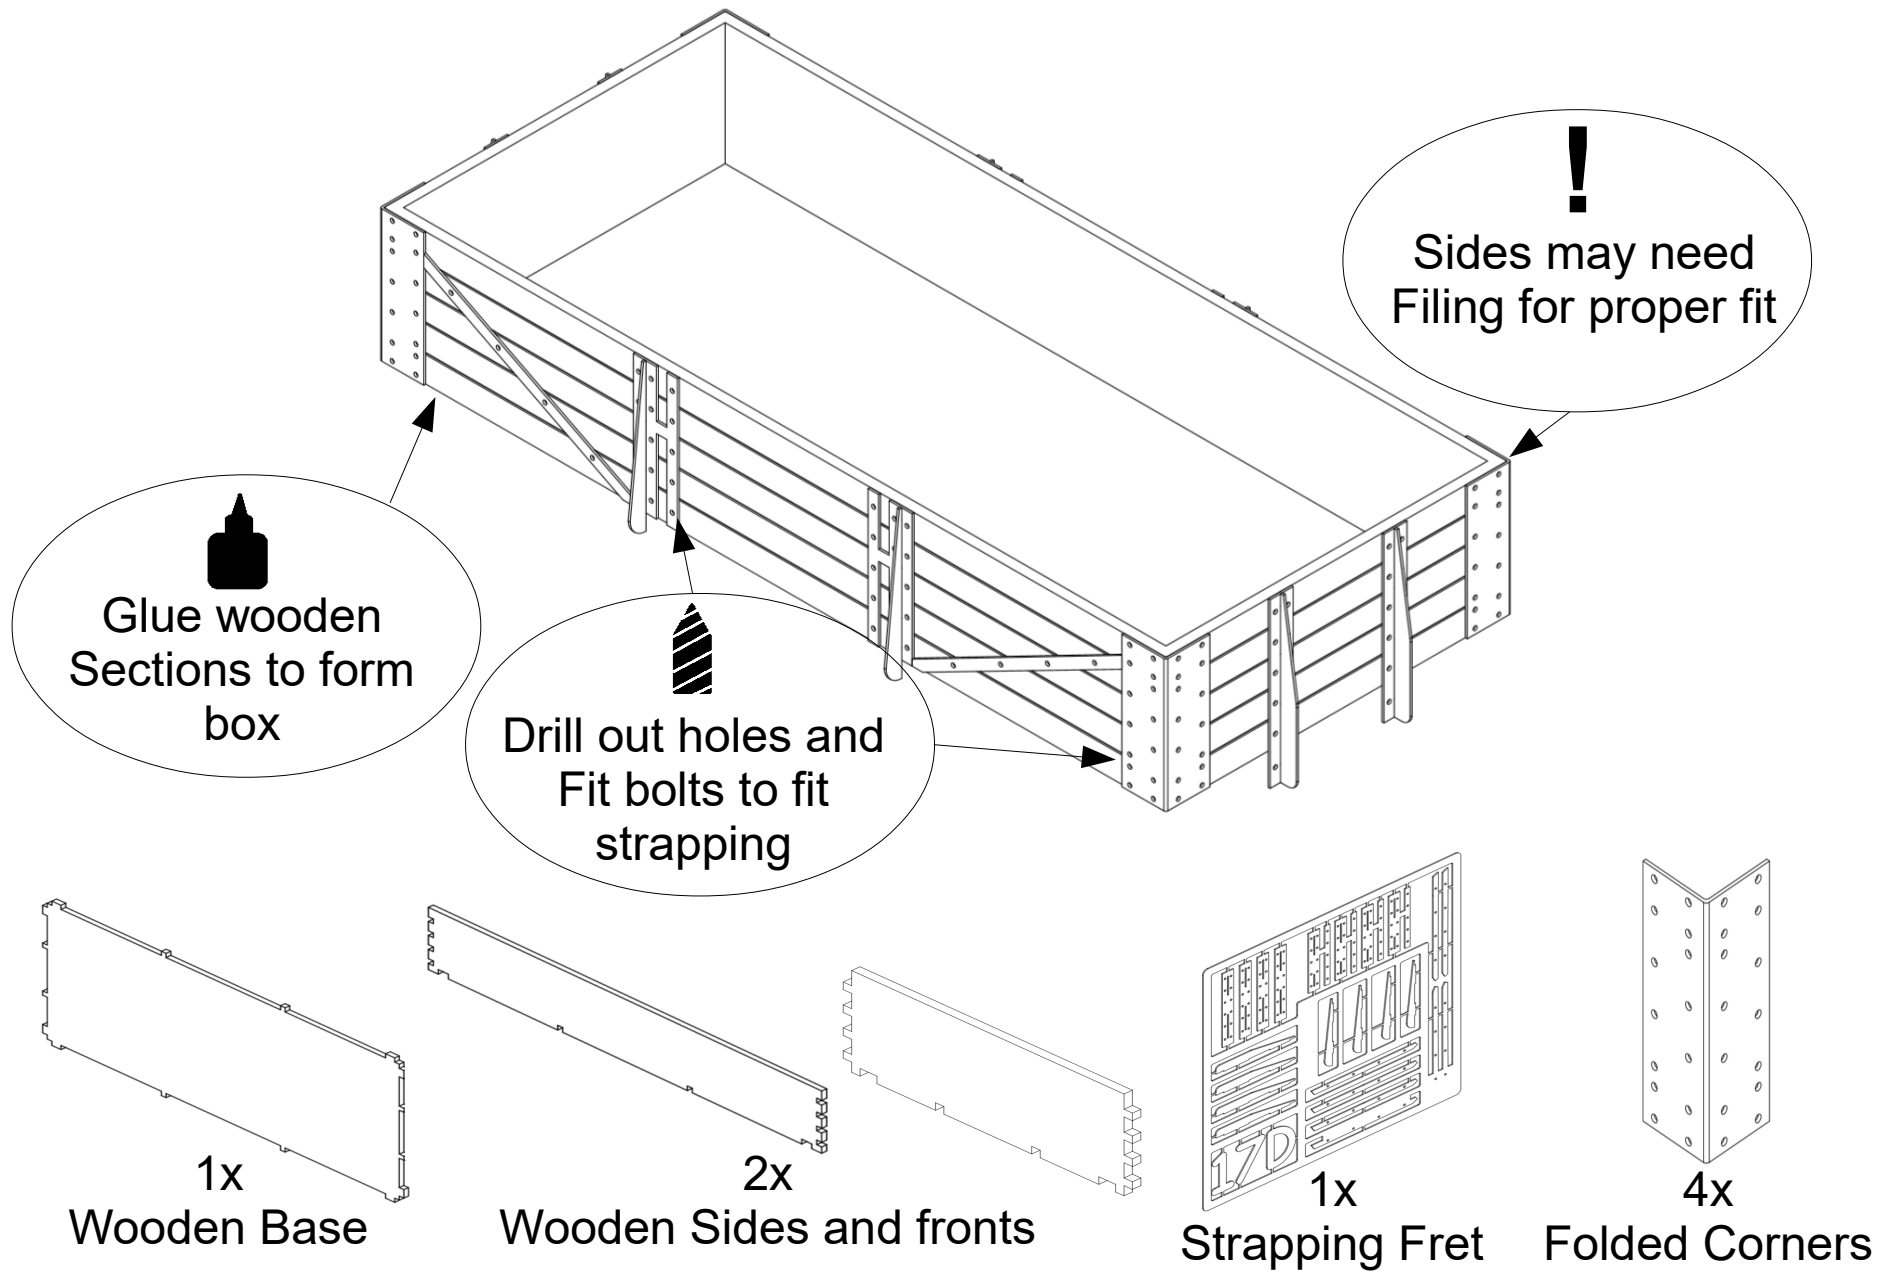


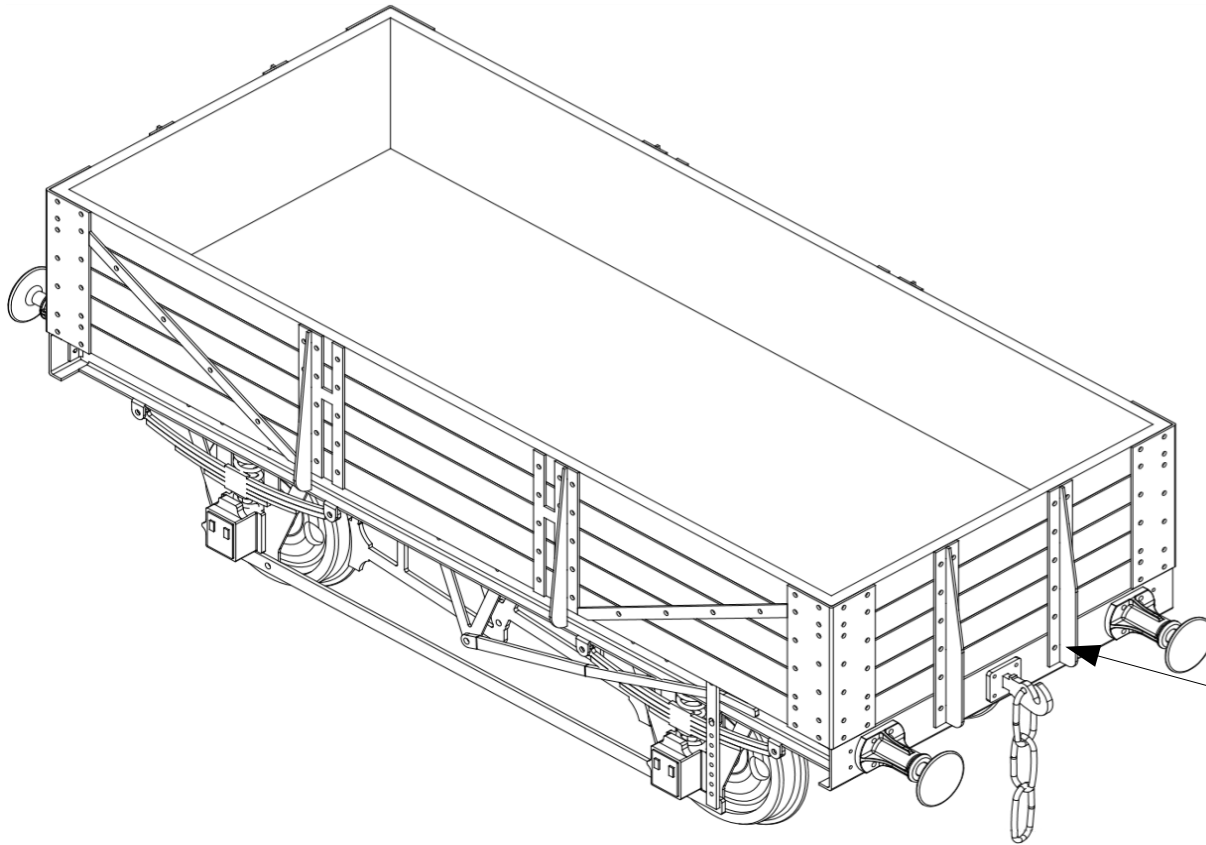



Drill out holes and
Fit bolts to
assemble

And Enjoy!

Tippler and Sand Wagons

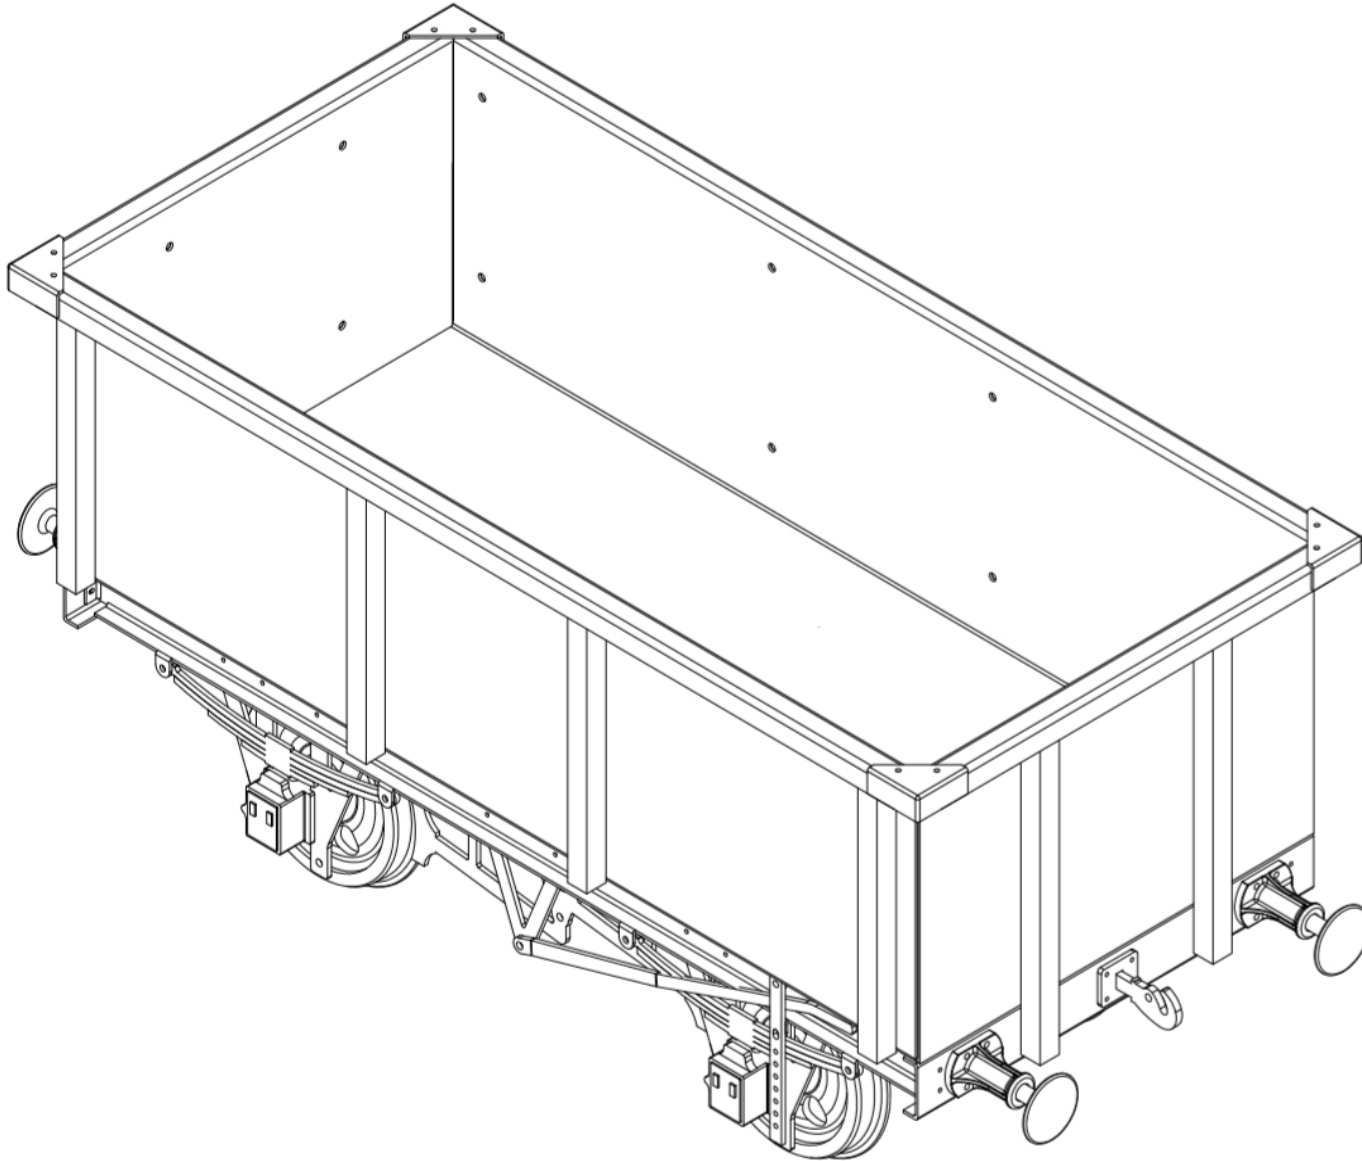


Tippler and Sand Wagons

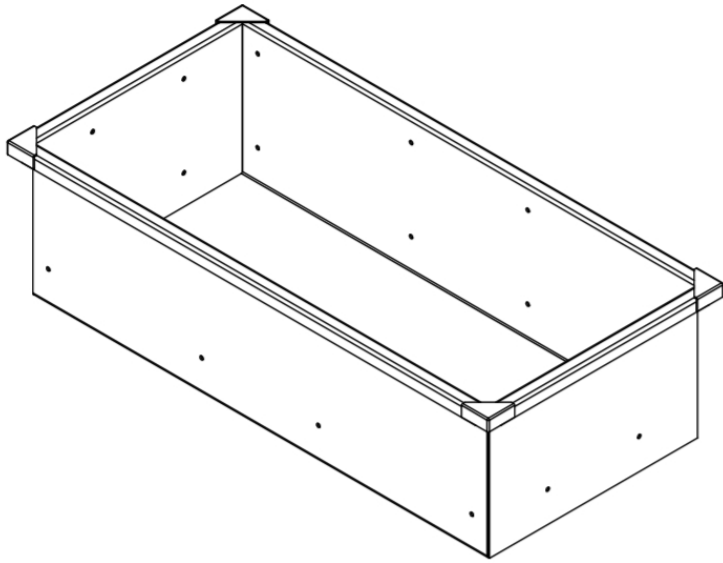


1x
Welded Together
Body




8x
Short Stanchions

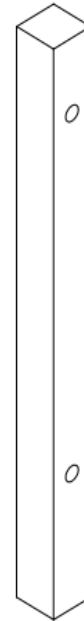

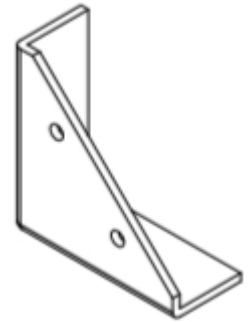

4x
Long Stanchions




4x
Folded Corners


Drill out holes and
Fit bolts to
Assemble to
chassis


Bolt Together.
3MM x 6MM bolts
recommended.


Bolt Together.
2MM bolts
recommended.

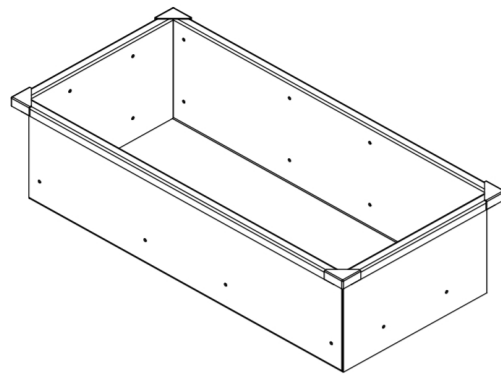


1x
Welded Together
Body




8x
Short Stanchions




4x
Long Stanchions

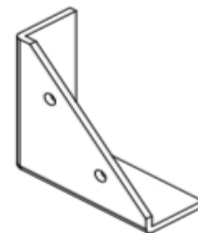


4x
Long Stanchions

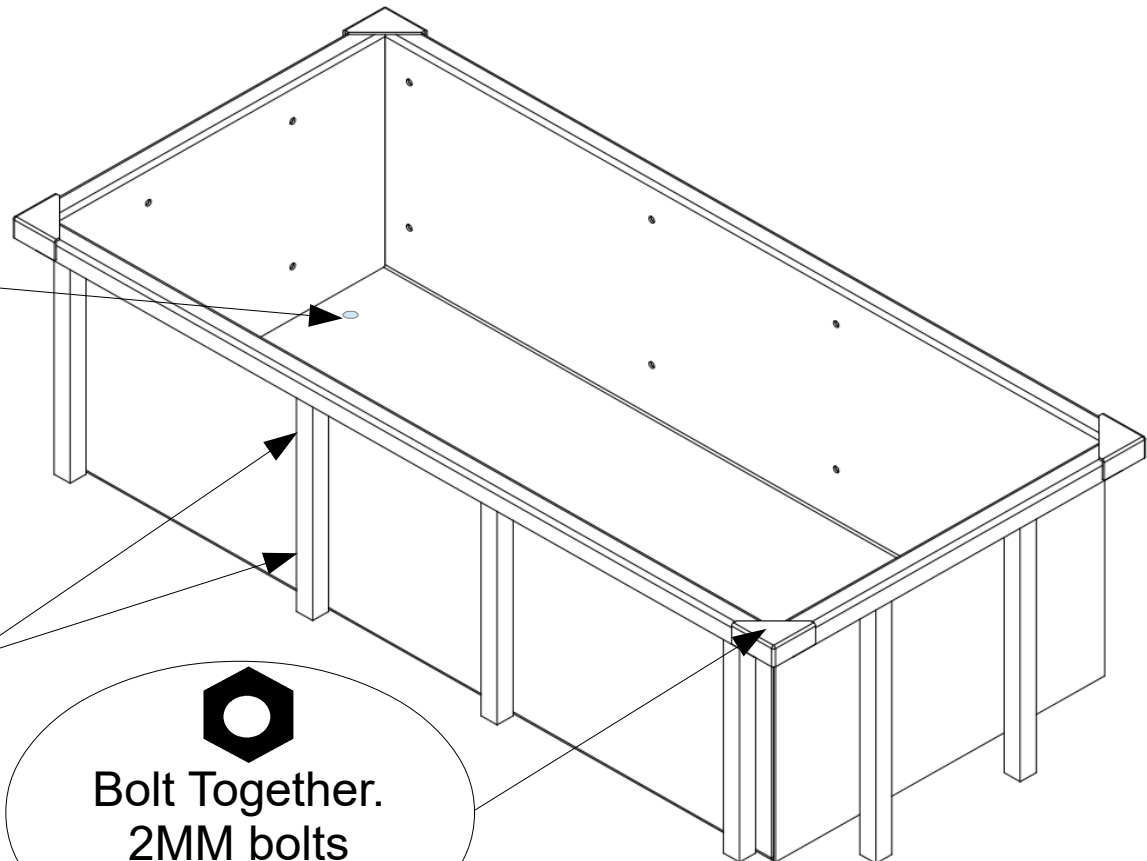


Banana Box Van Kit

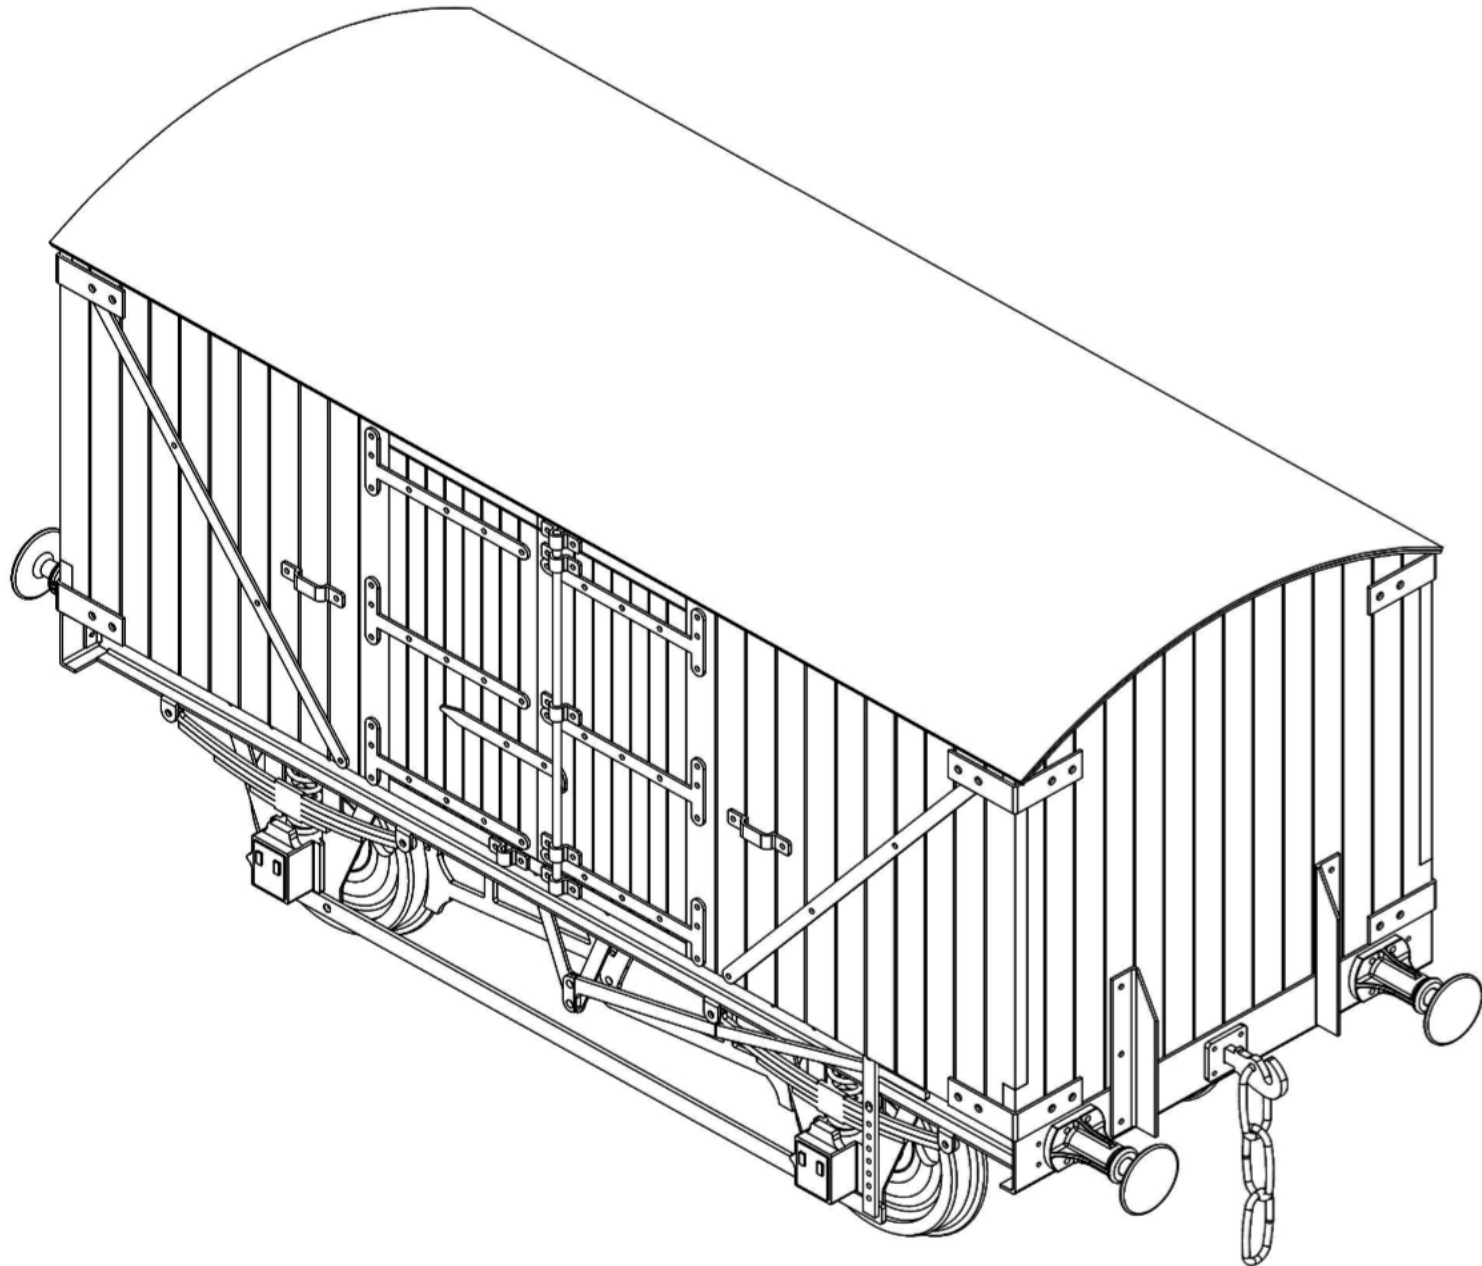


Banana Box Van Kit

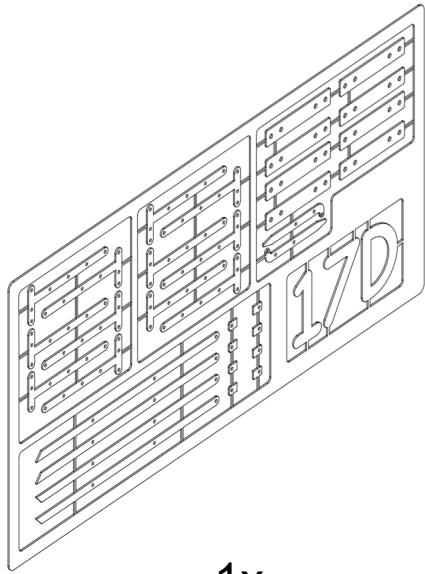


1x
Strapping Fret:
5in Banana Van

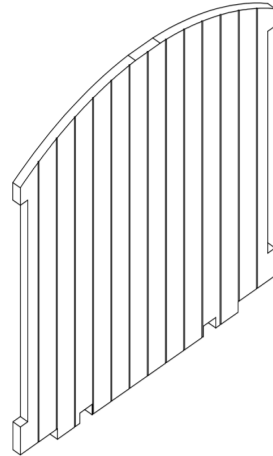


2x
Wooden Ends

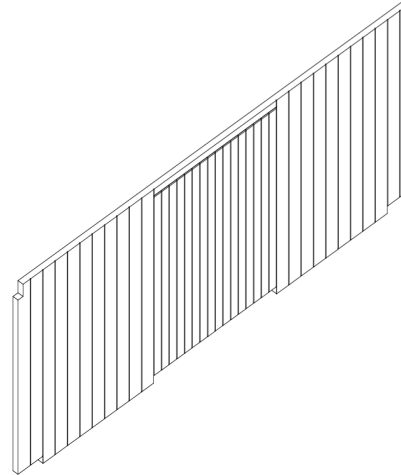


2x
Wooden Sides

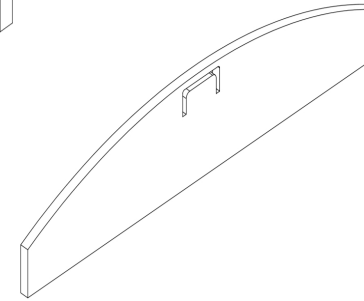


2x
Wooden Roof
inlays

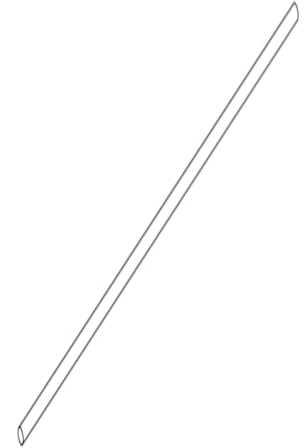


2x
3MM Dia
Door Bars

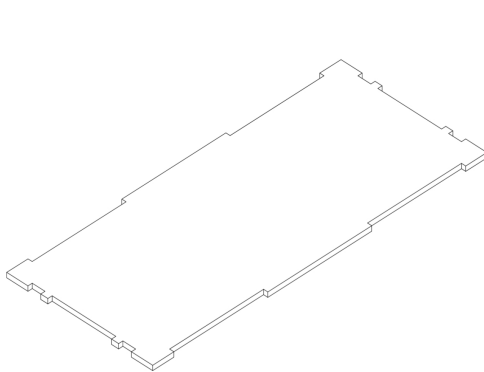


1x
Wooden Base

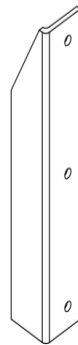


4x
Laser cut and
Folded end pieces

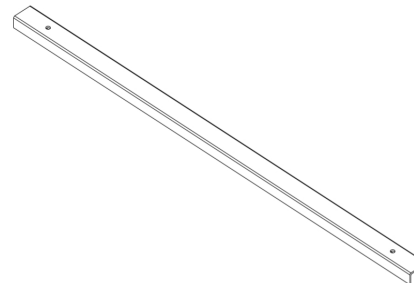


1x
Folded C section

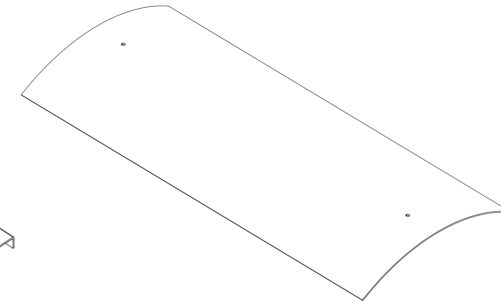




1x
Folded Roof

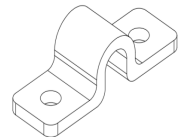

6x
Cast brass
Brackets

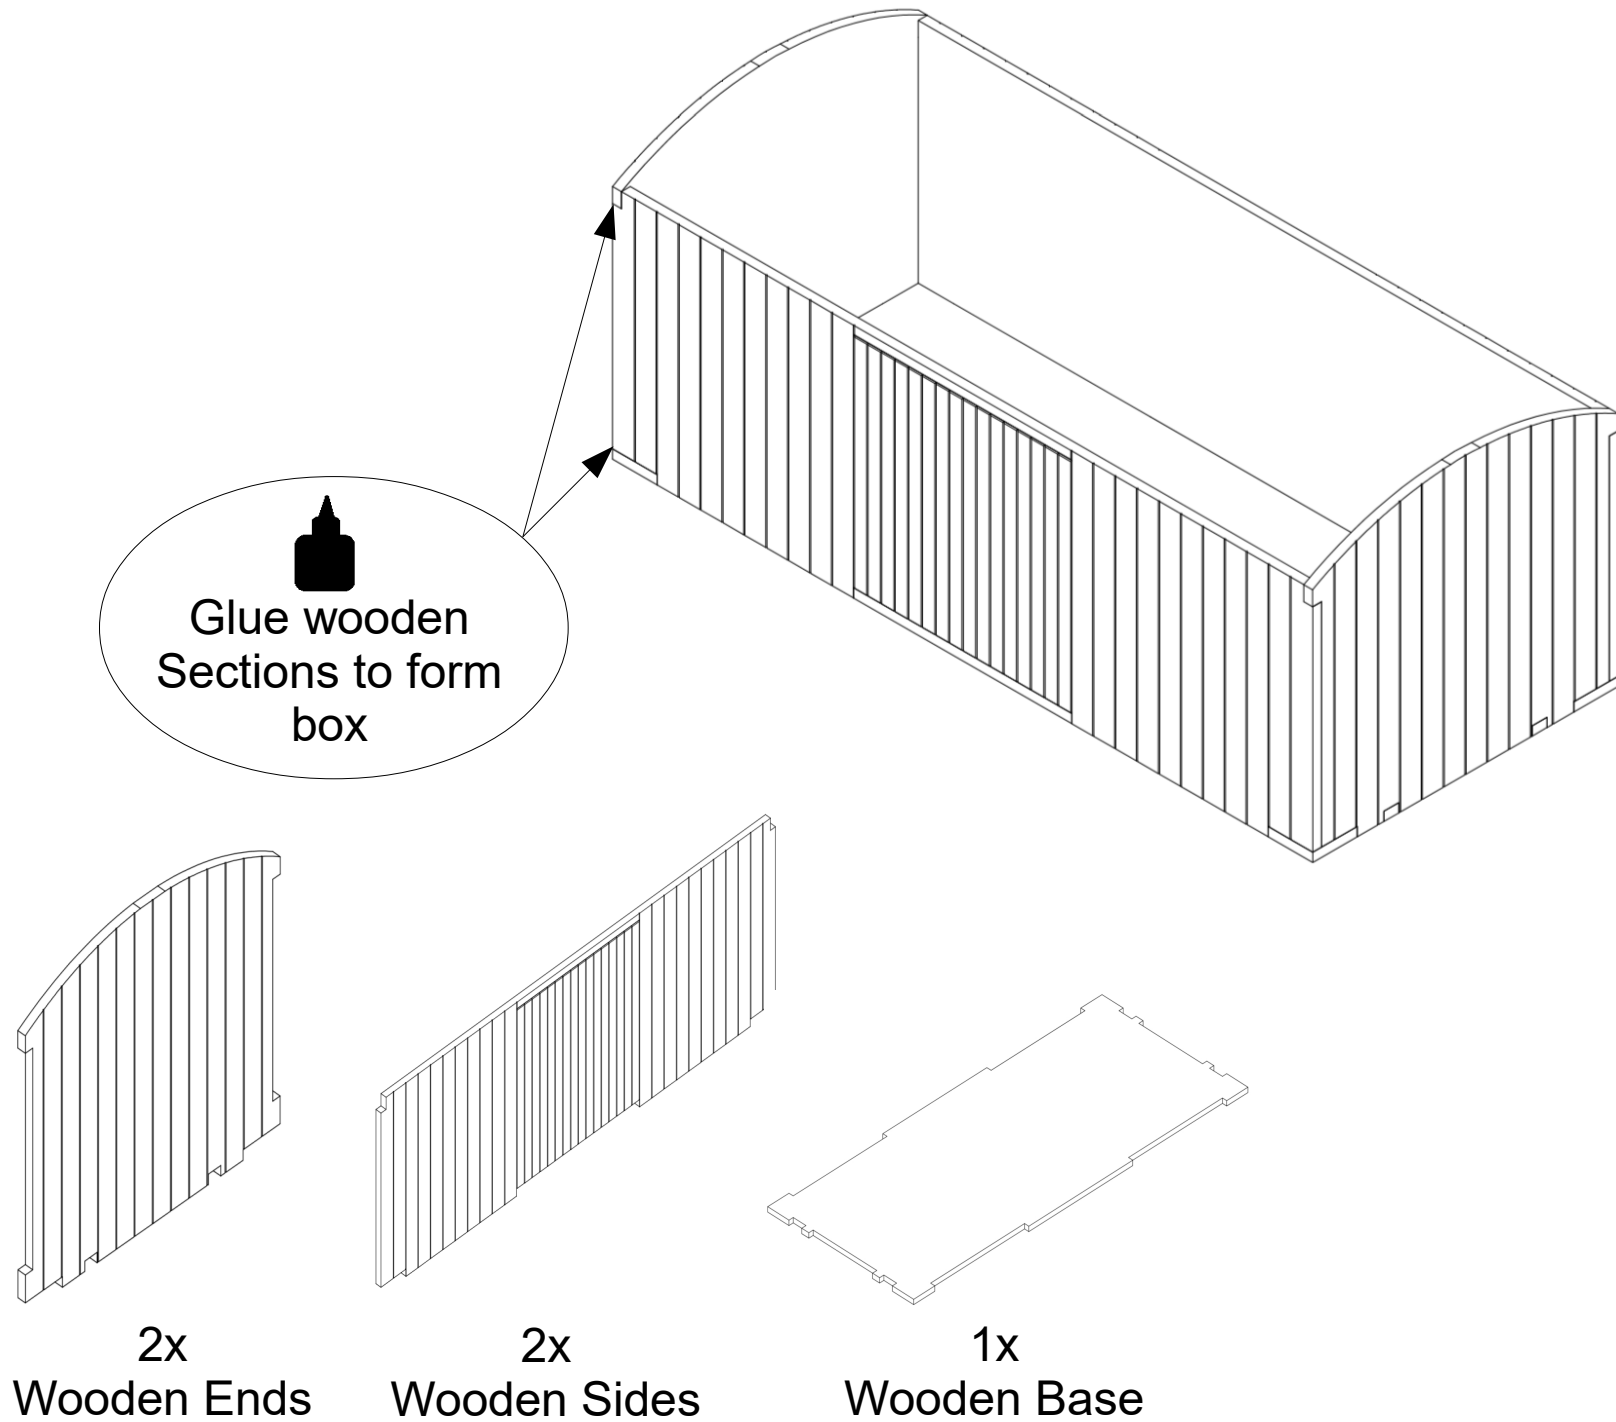


2

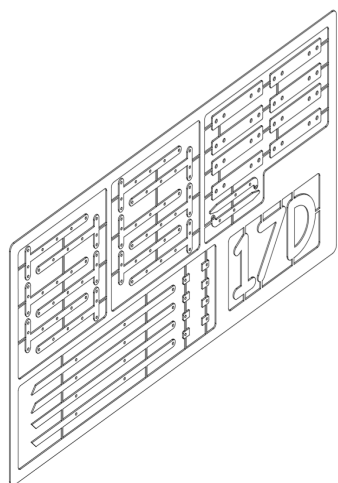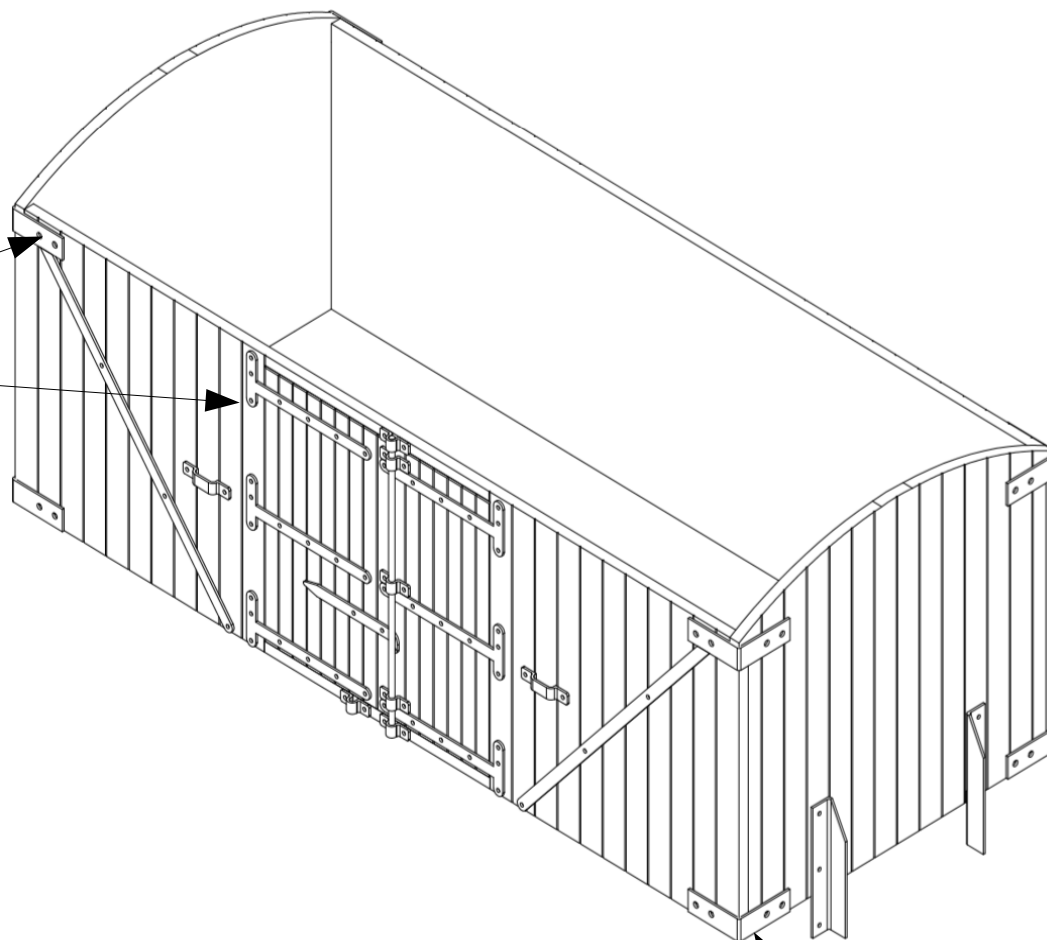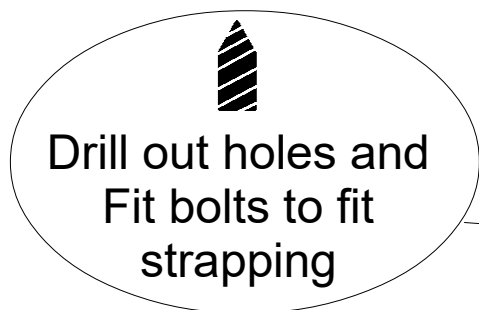


1x
Strapping Fret:
5in Banana Van




4x
Laser cut and
Folded end pieces

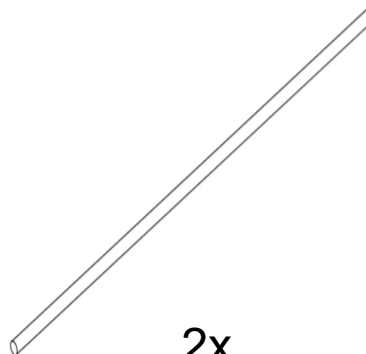

2x
3MM Dia
Door Bars

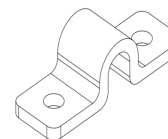

6x
Cast brass
Brackets

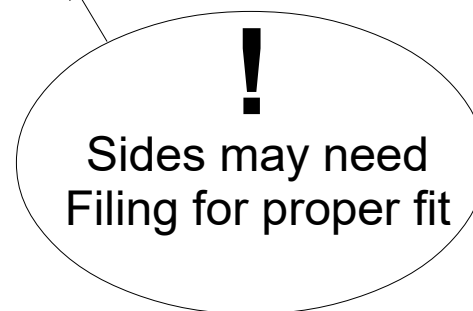



3




First glue these
3 pieces together as
as an sub-assembly
before glueing it
Inside.




Glue
Assembly inside
Box van

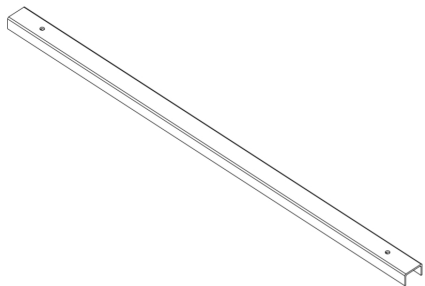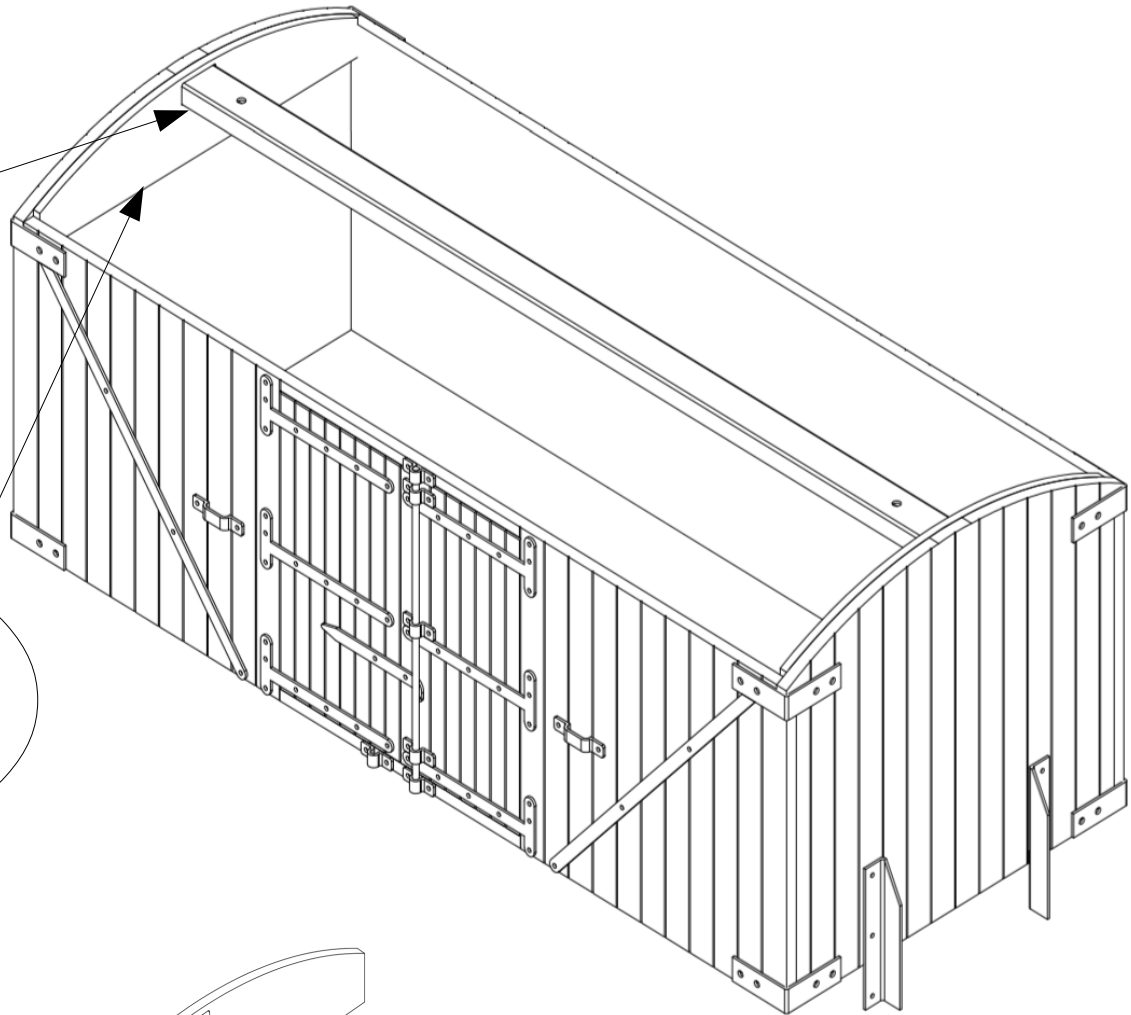

1x
Folded C section

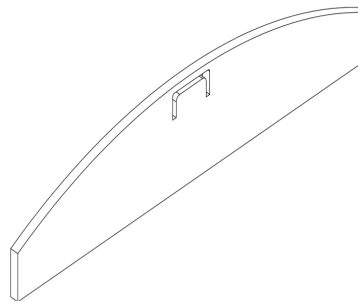

2x
Wooden Roof
inlays

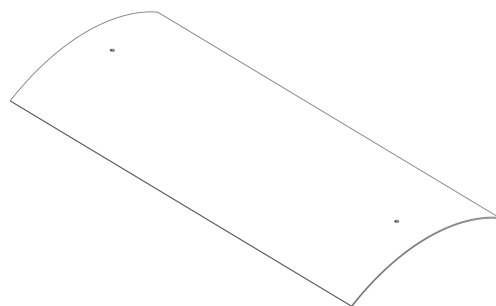

1x
Folded Roof

